


# MAE 5032 High Performance Computing: Methods and Practices

## Lecture 15: Visualization

**Ju Liu**

Department of Mechanics and Aerospace Engineering  
liuj36@sustech.edu.cn



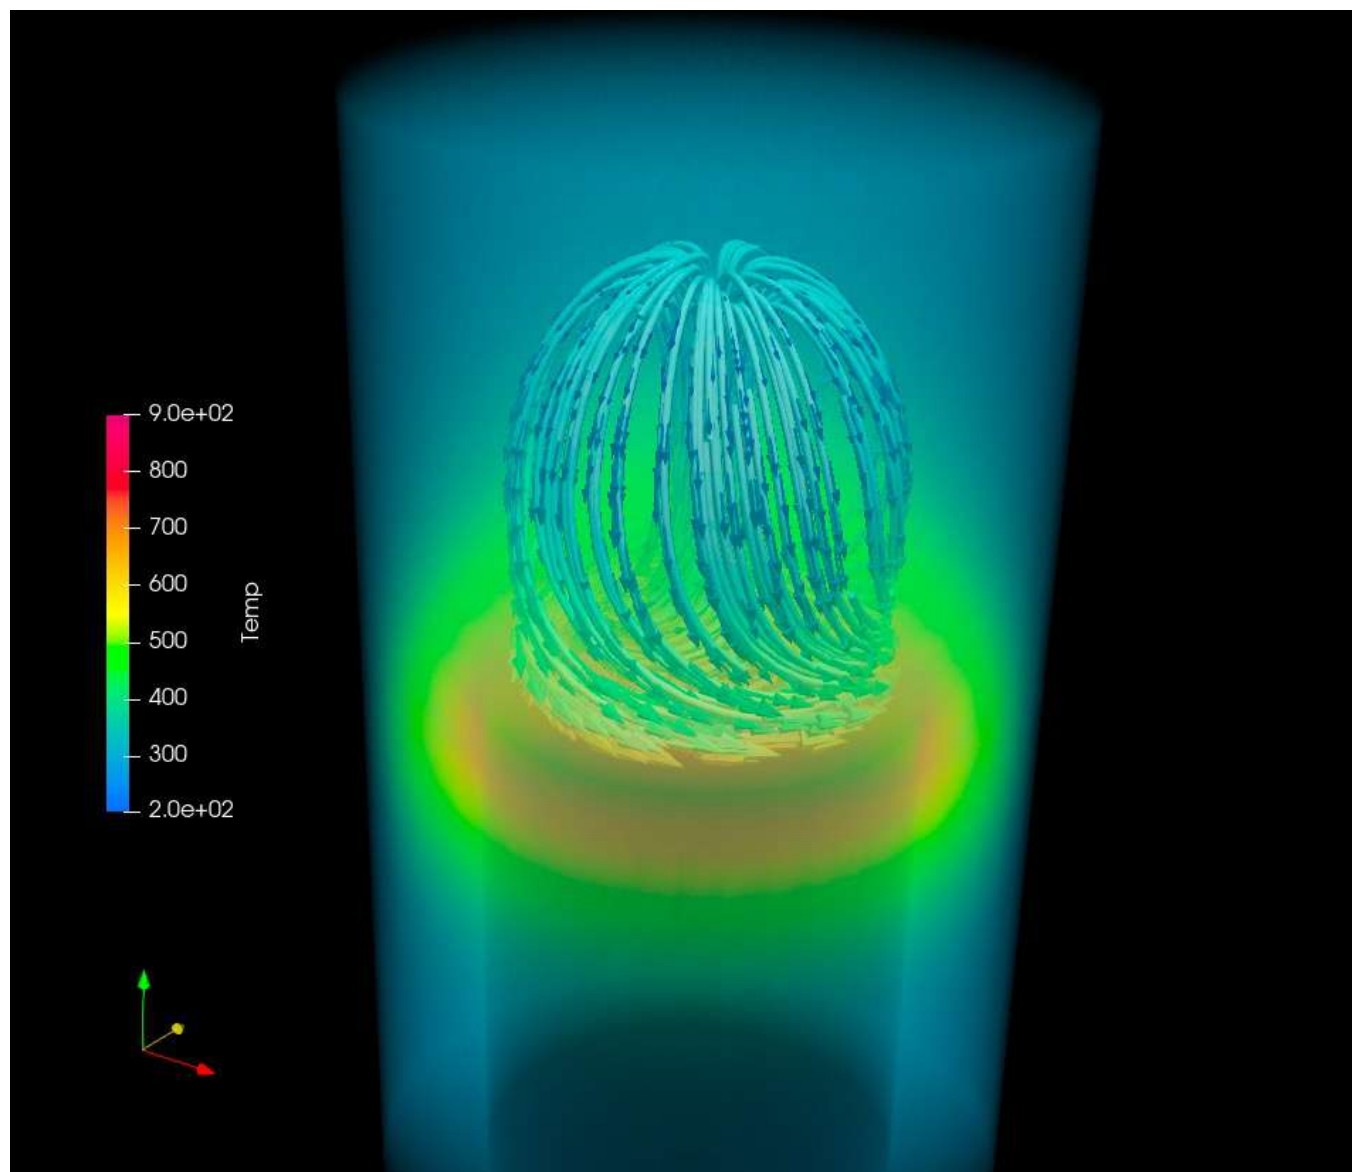

# Paraview

- Open-source, multi-platform parallel data analysis and visualization application
- Good for general-purpose, rapid visualization
- Built on top of the Visualization ToolKit (VTK) library
- Primary contributors:
  - Kitware, Inc.
  - Sandia National Laboratory
  - LosAlamos National Laboratory
  - Army Research Laboratory
- Supports a wide range of data types
  - Structured grids
  - Unstructured grids
  - Polygonal data
  - DICOM images
  - ...
- Support time series data



# Paraview

- Supports a wide variety of visualization algorithms known as filters
  - Isosurfaces
  - Cutting planes
  - Volume rendering
  - Clipping
- Supports derived variables
  - New scalar/vector data that are functions of existing variables in your data set
- Saves animations
- Can run in parallel / distributed mode for large data visualization


# Data formats

- Dataset: 2 linear tetrahedrons

```
# vtk DataFile Version 4.2
vtk output
ASCII
DATASET UNSTRUCTURED_GRID
POINTS 5 double
0 0 0 1 0 0 0 1 0
0 0 1 1 1 1
CELLS 2 10
4 0 1 2 3
4 1 2 3 4

CELL_TYPES 2
10
10

CELL_DATA 2
FIELD FieldData 1
GlobalCellID 1 2 int
1 2
POINT_DATA 5
FIELD FieldData 1
GlobalNodeID 1 5 int
1 2 3 4 5
```

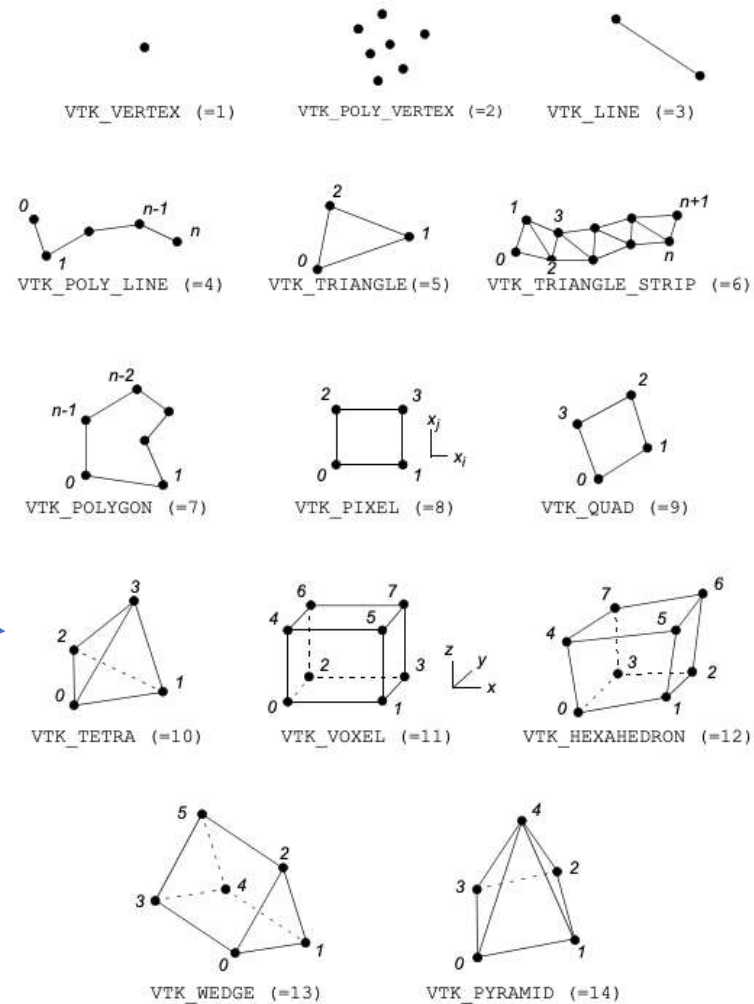

Refer vtk file formats

# Data formats

- Dataset: 2 linear tetrahedrons


```
# vtk DataFile Version 4.2
vtk output
ASCII
DATASET UNSTRUCTURED_GRID
POINTS 5 double
0 0 0 1 0 0 0 1 0
0 0 1 1 1 1
CELLS 2 10
4 0 1 2 3
4 1 2 3 4

CELL_TYPES 2
10
10

CELL_DATA 2
FIELD FieldData 1
GlobalCellID 1 2 int
1 2
POINT_DATA 5
FIELD FieldData 1
GlobalNodeID 1 5 int
1 2 3 4 5
```



ParaView

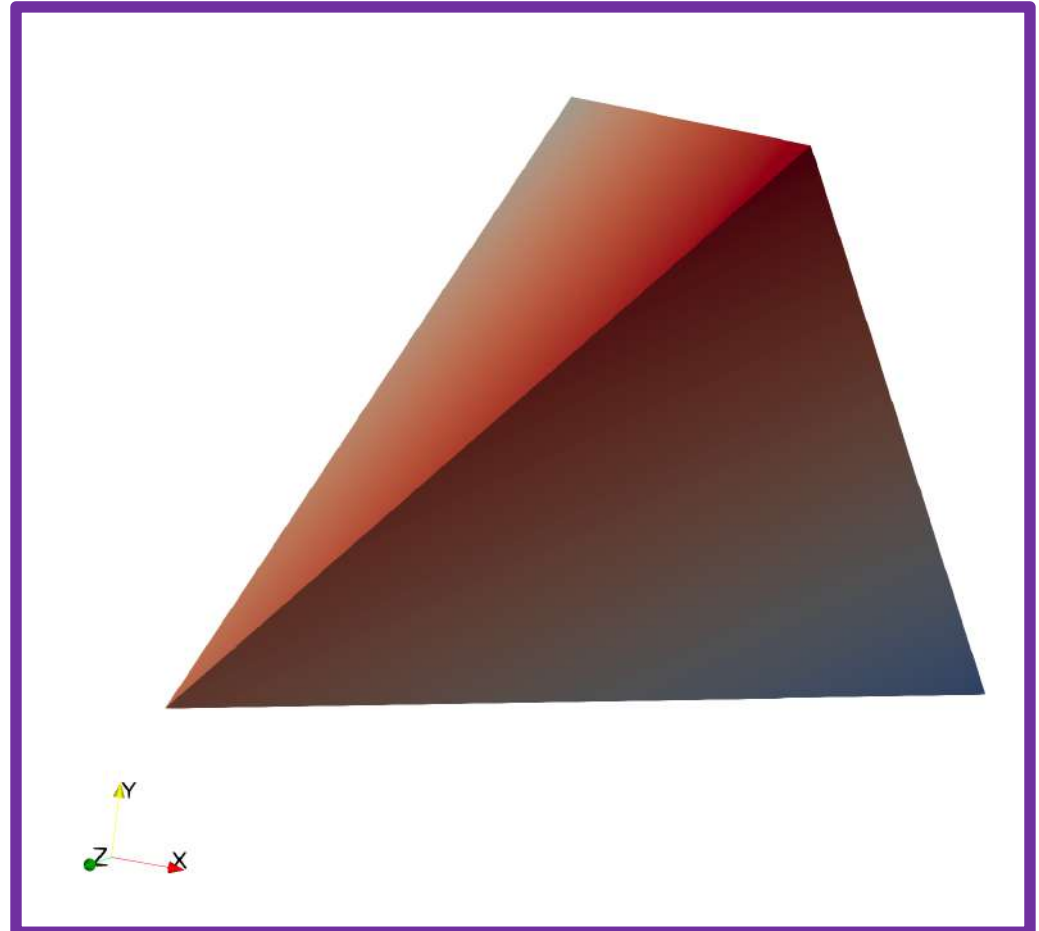

Refer vtk file formats

# Paraview tutorial

- Download the example data file: `disk_out_ref.ex2`
- Open Paraview

Refer vtk file formats

# Paraview


Menu bar

Toolbars

Pipeline browser

Object Inspector

3D View

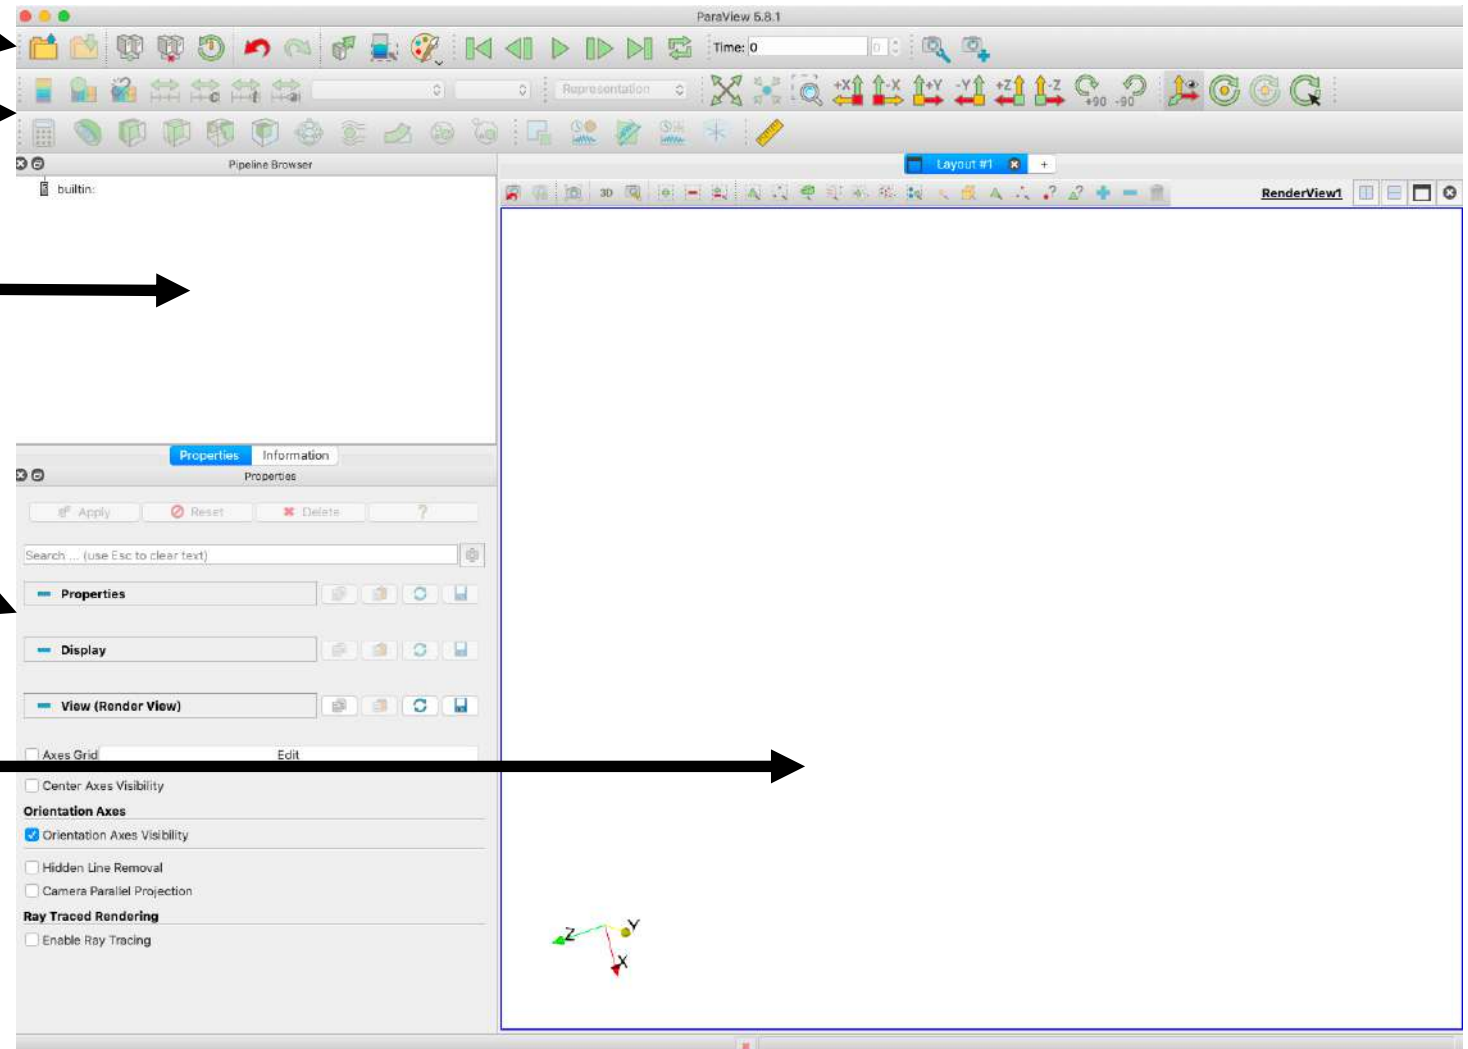




# Paraview

Undo/Redo



Camera controls

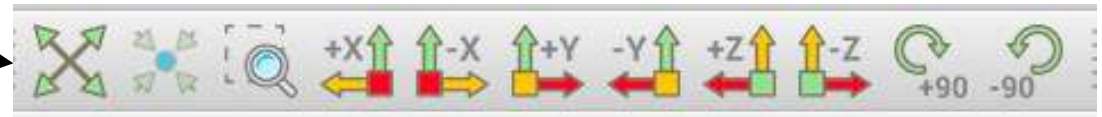

View controls




VCR controls



Common controls



Active Variable Controls

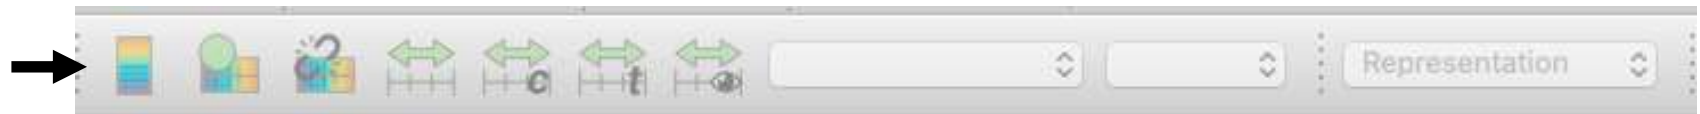


**Visualize data**

3. You should be able to see the eyes is turned on

2. Then click Apply


1. Select the data you want to visualize

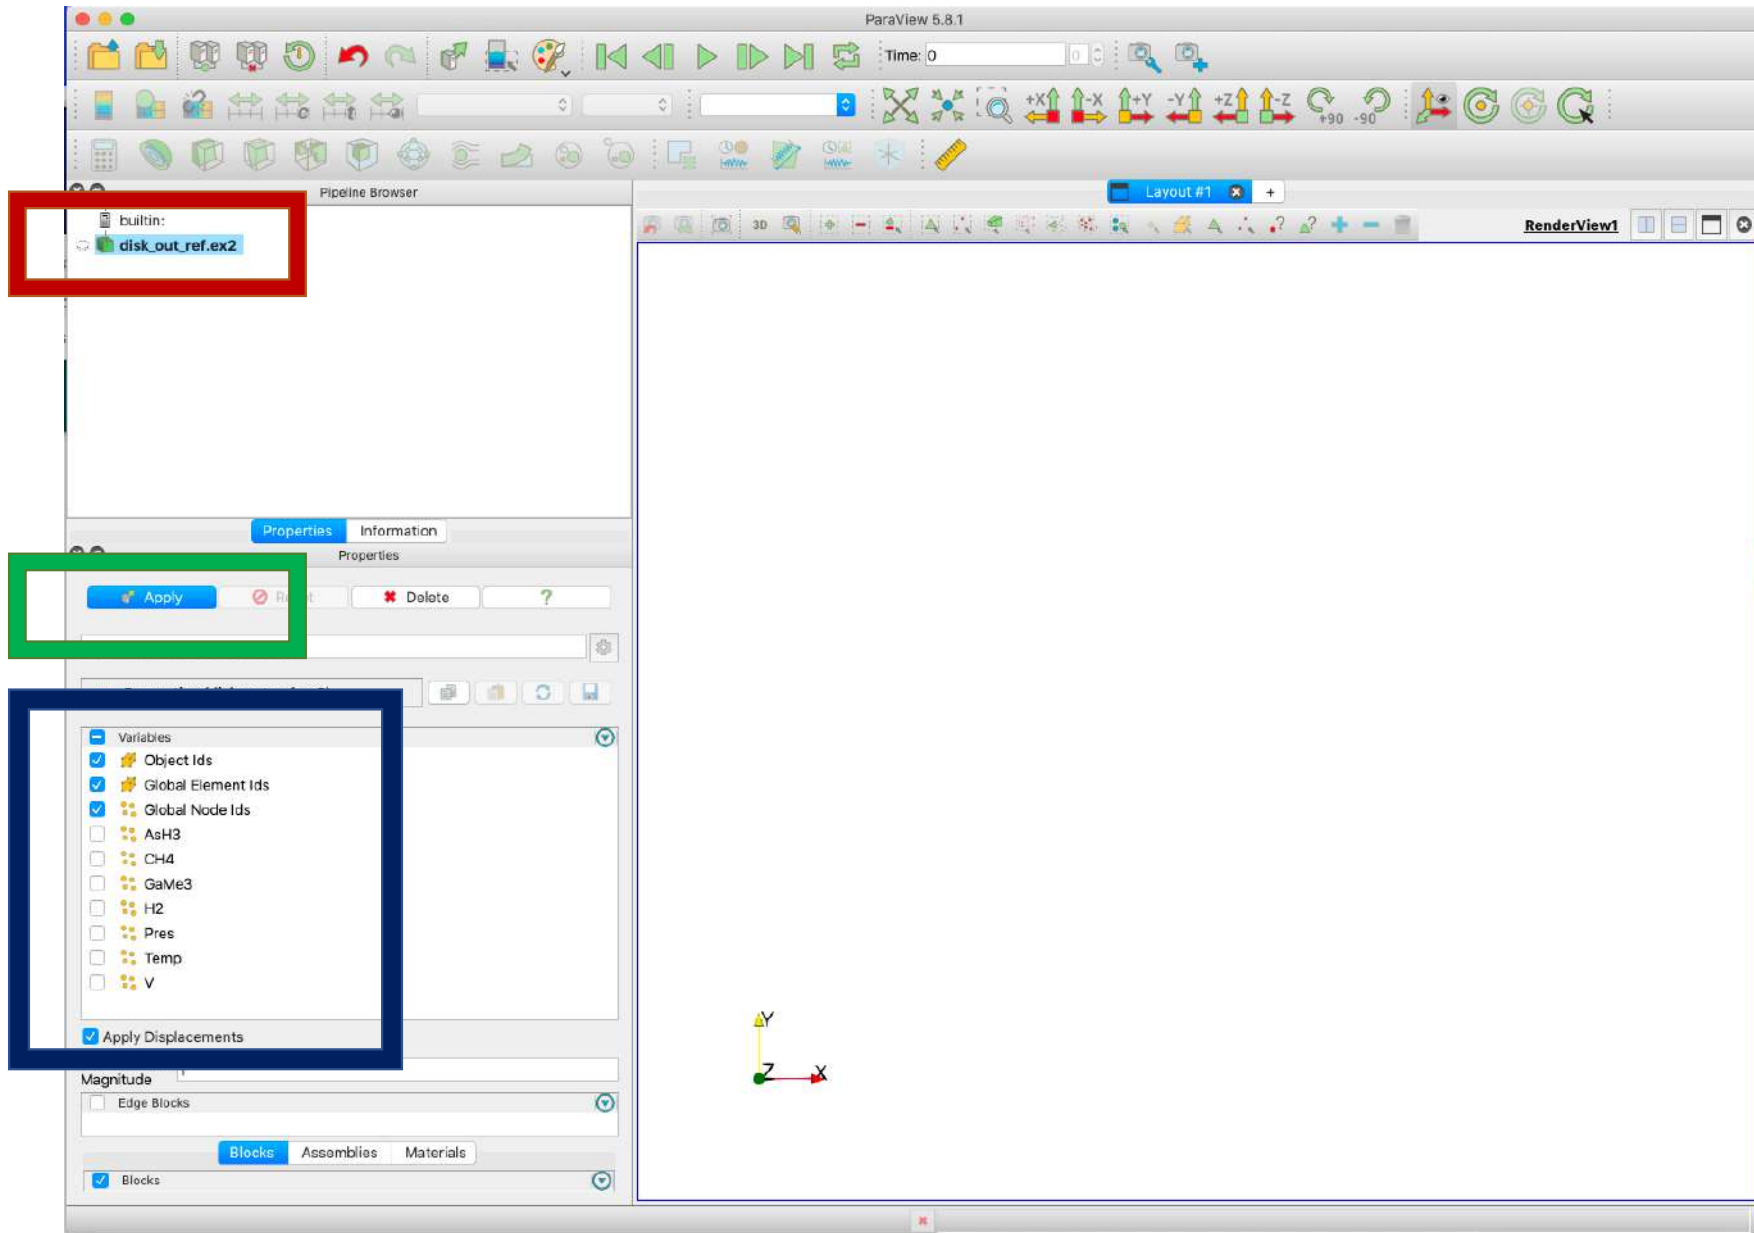

3. You should be able to see the eyes is turned on


2. Then click Apply

1. Select the data you want to visualize

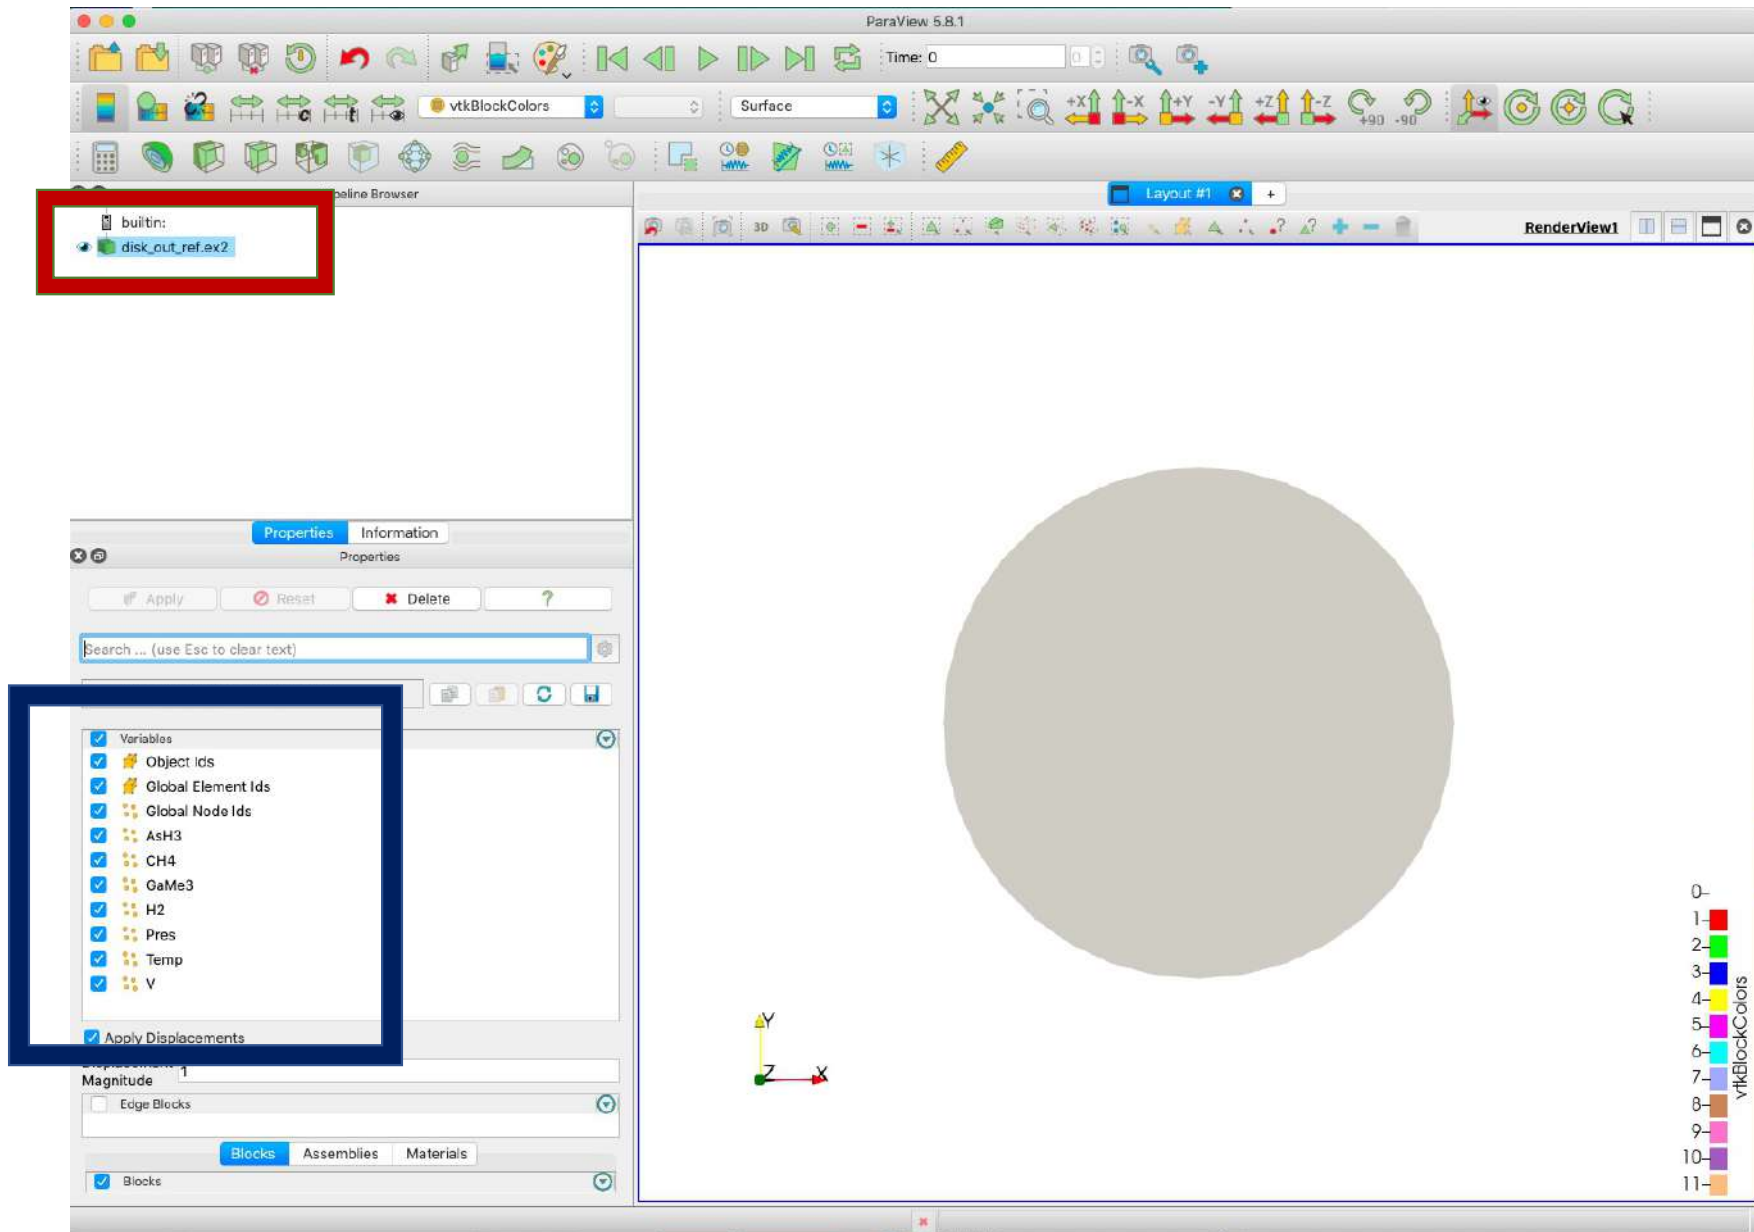


4. Select “pres”

5. Select  
“surface with  
edges”

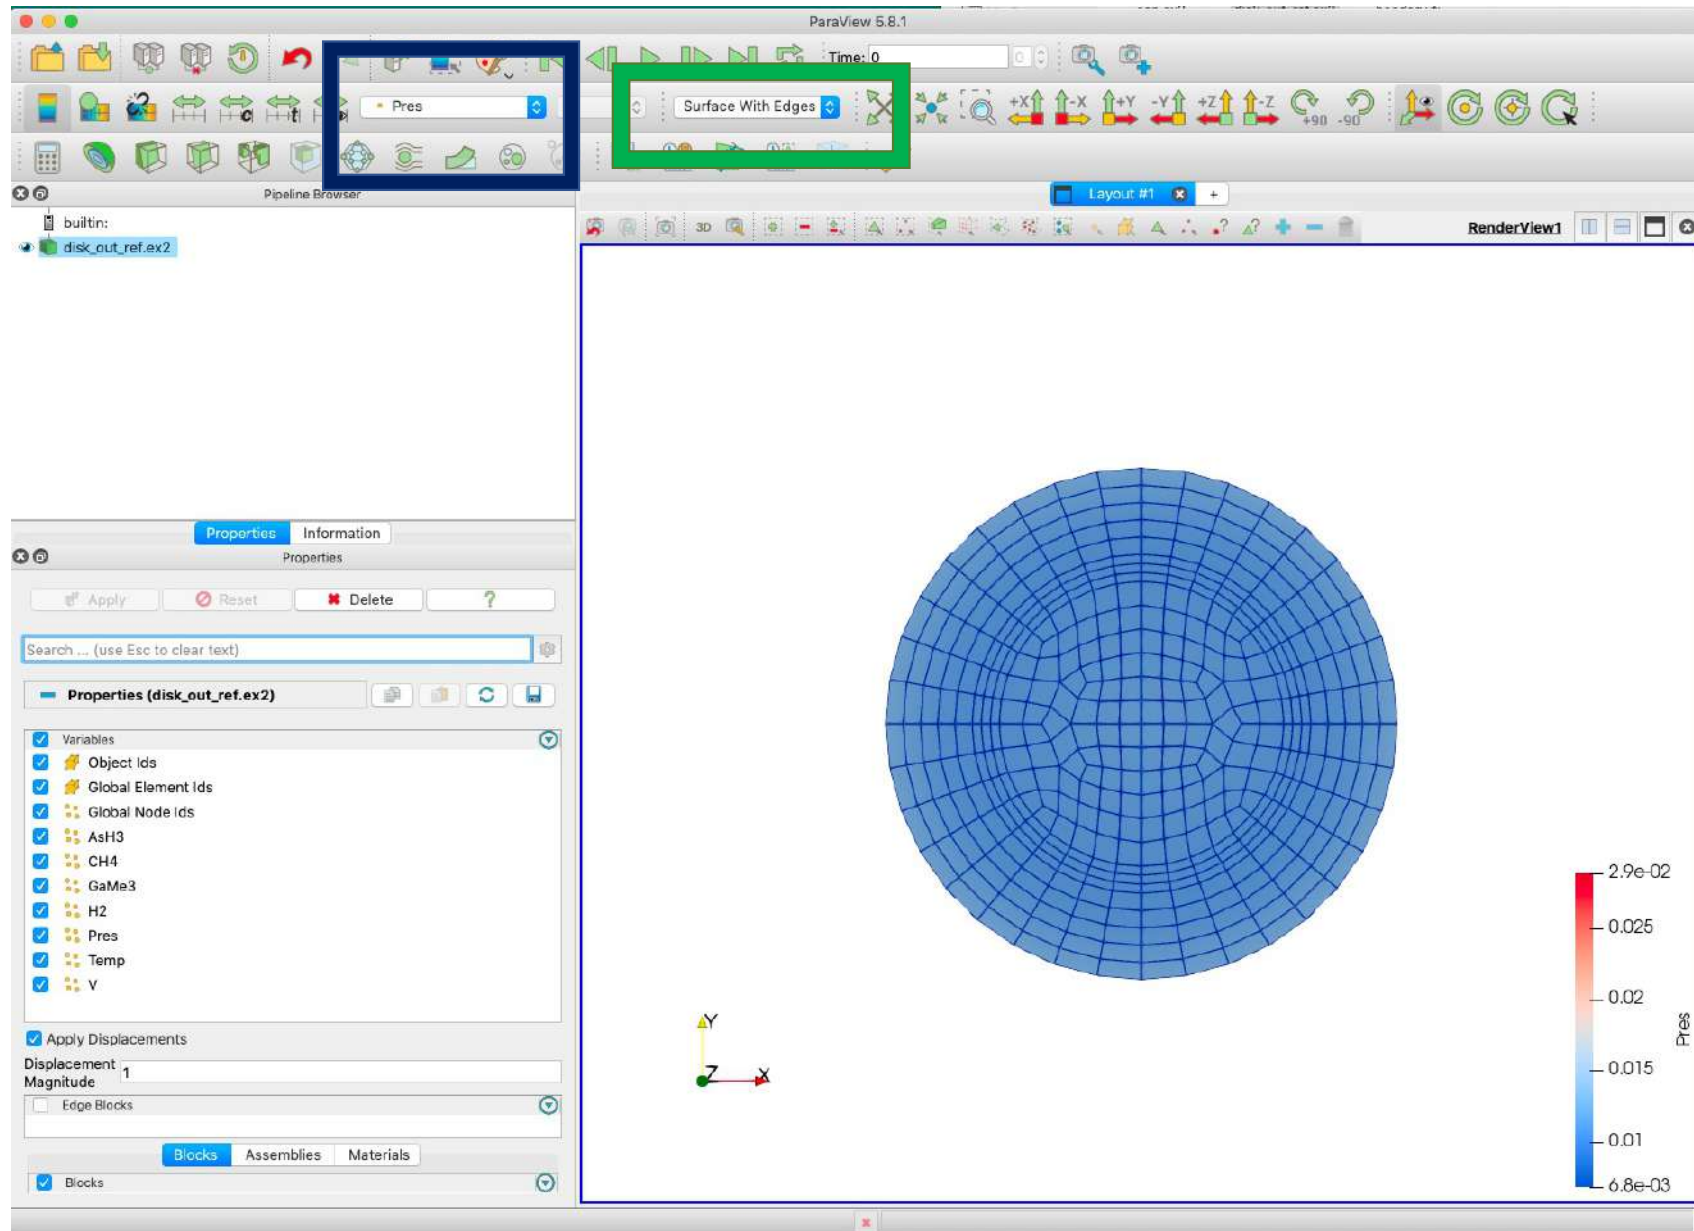

6. Edit the color map

7. Change the camera location

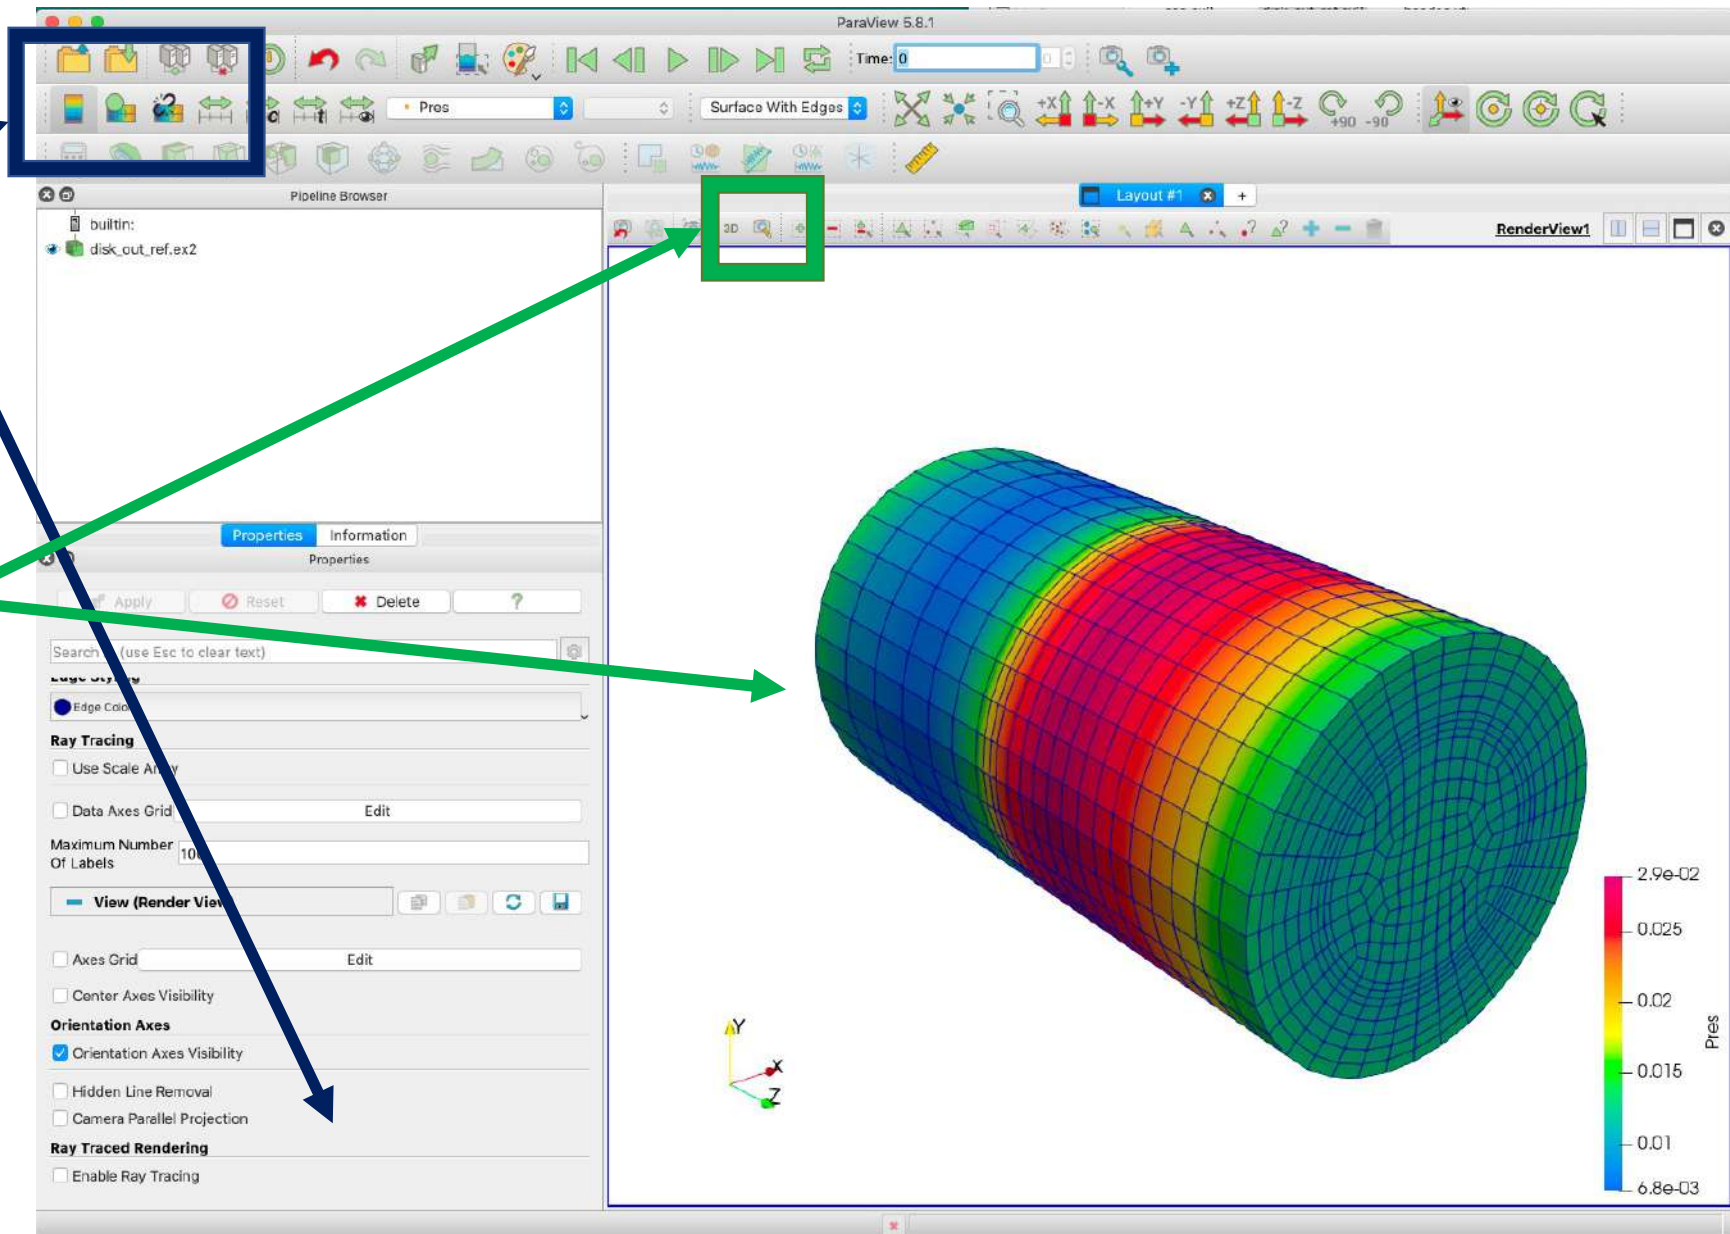

# Contour filter




1. Select  
contour filter

2. Select  
contour by  
temp

3. Generate  
the values for  
isosurfaces


4. Hit apply

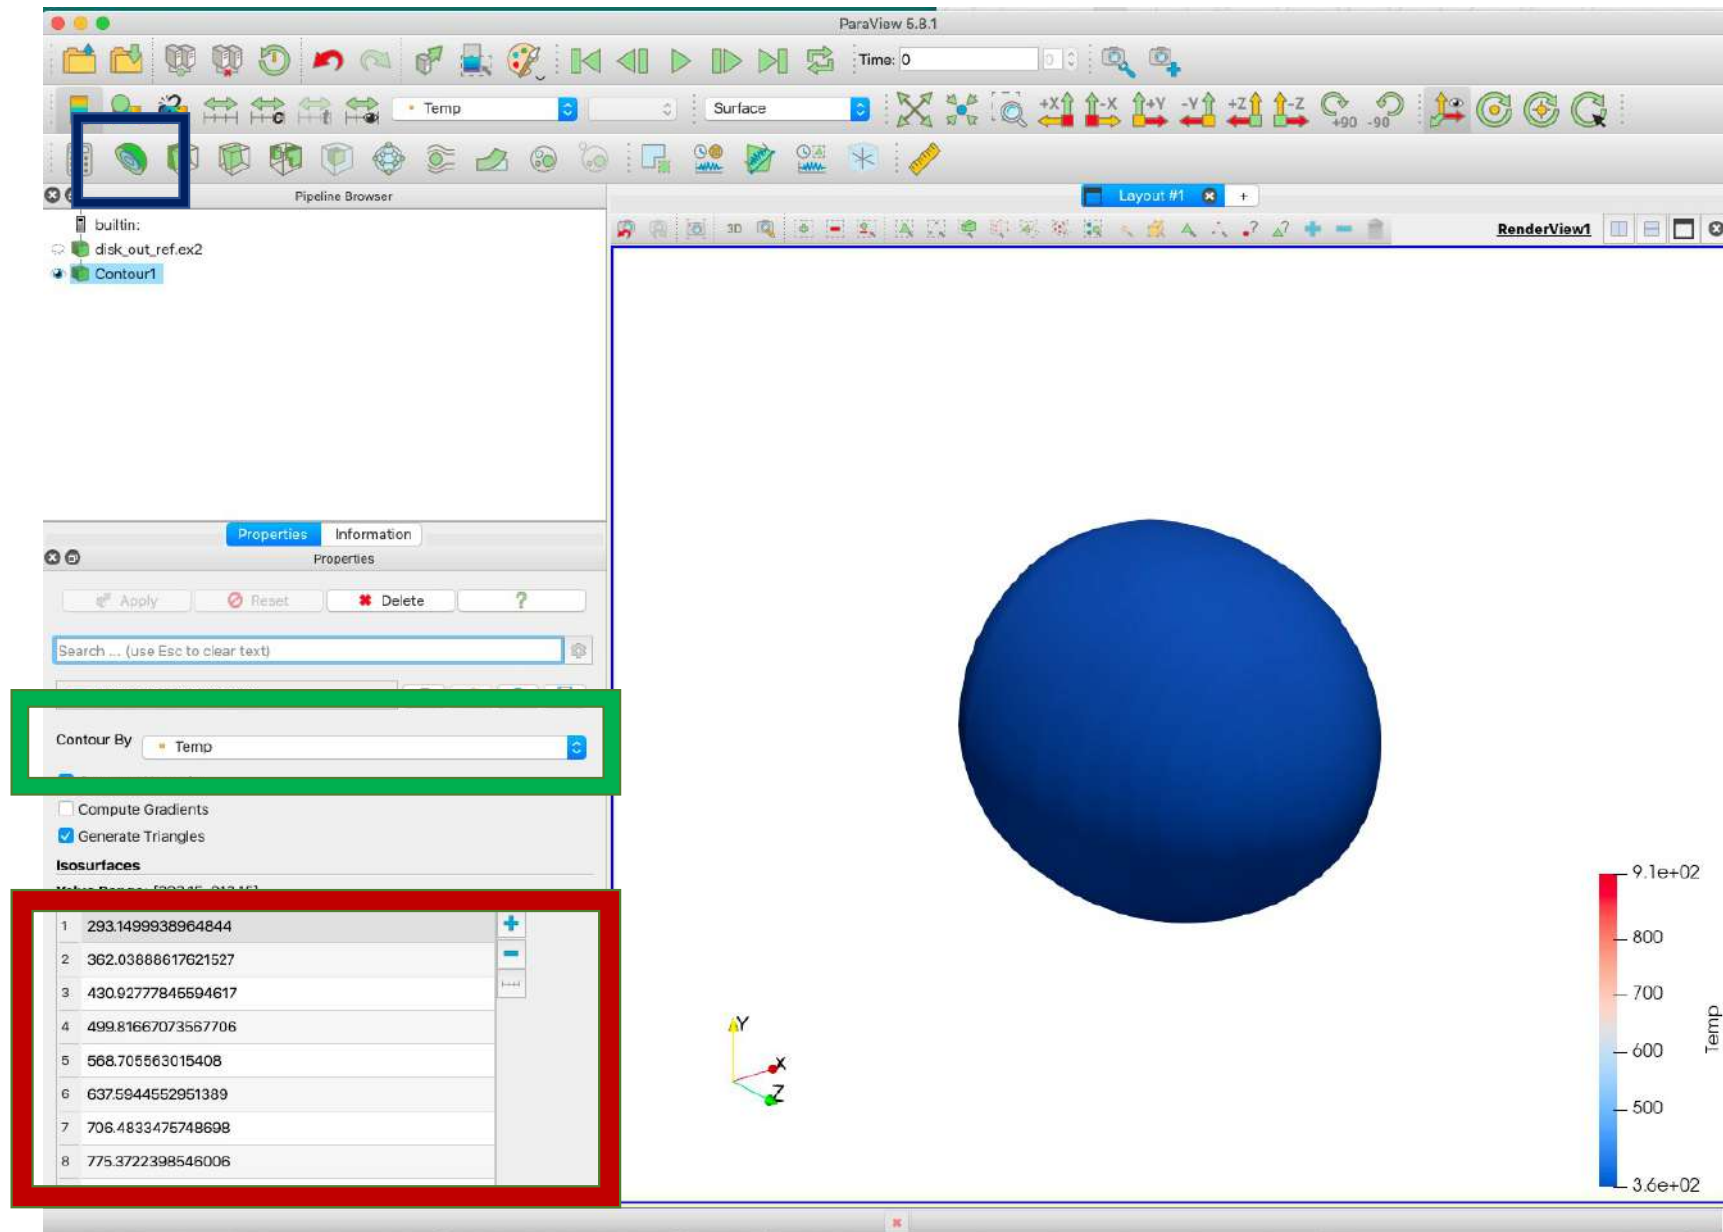



1. Turn on the pressure visualization by hitting the eye

2. Select wireframe for pressure representation

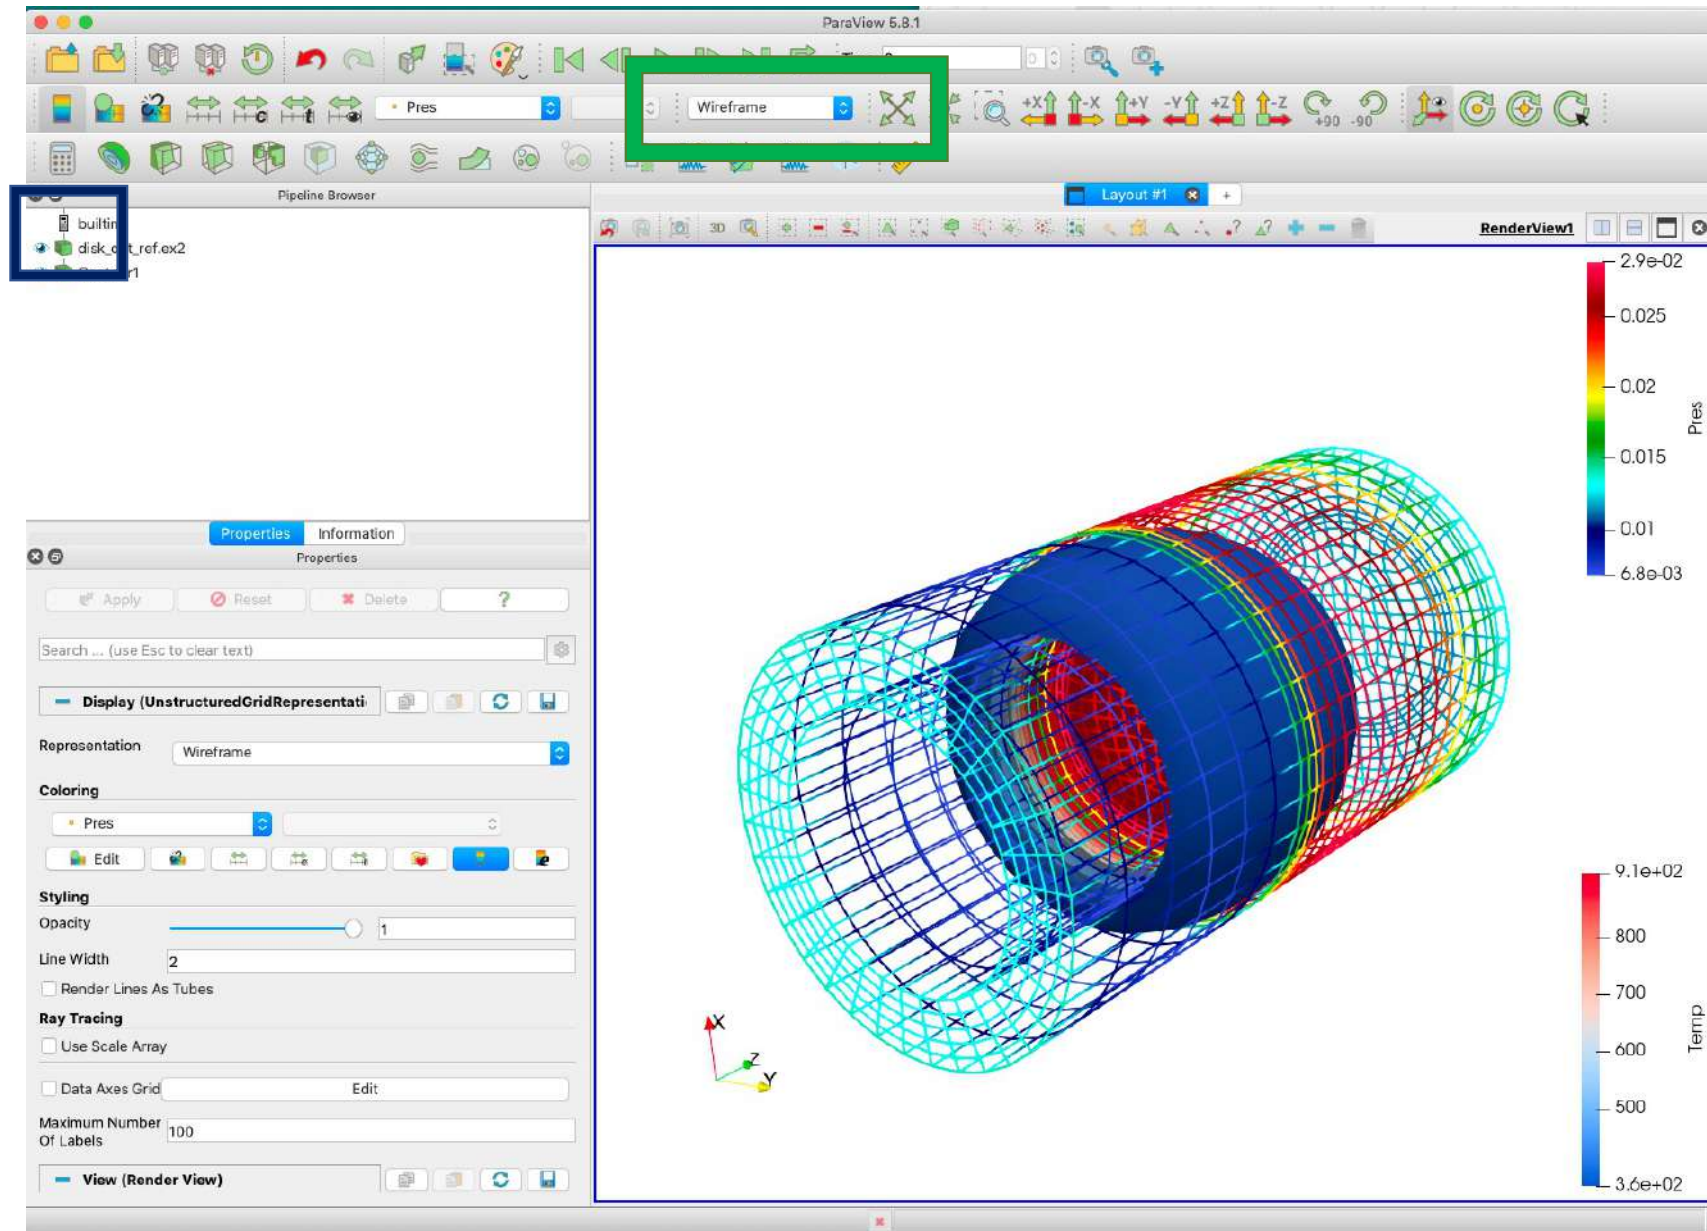


# Clip and slice filter

1. Choose pressure representation on surface

2. Select the clip filter

3. Select the plane for clip cut

4 Hit apply

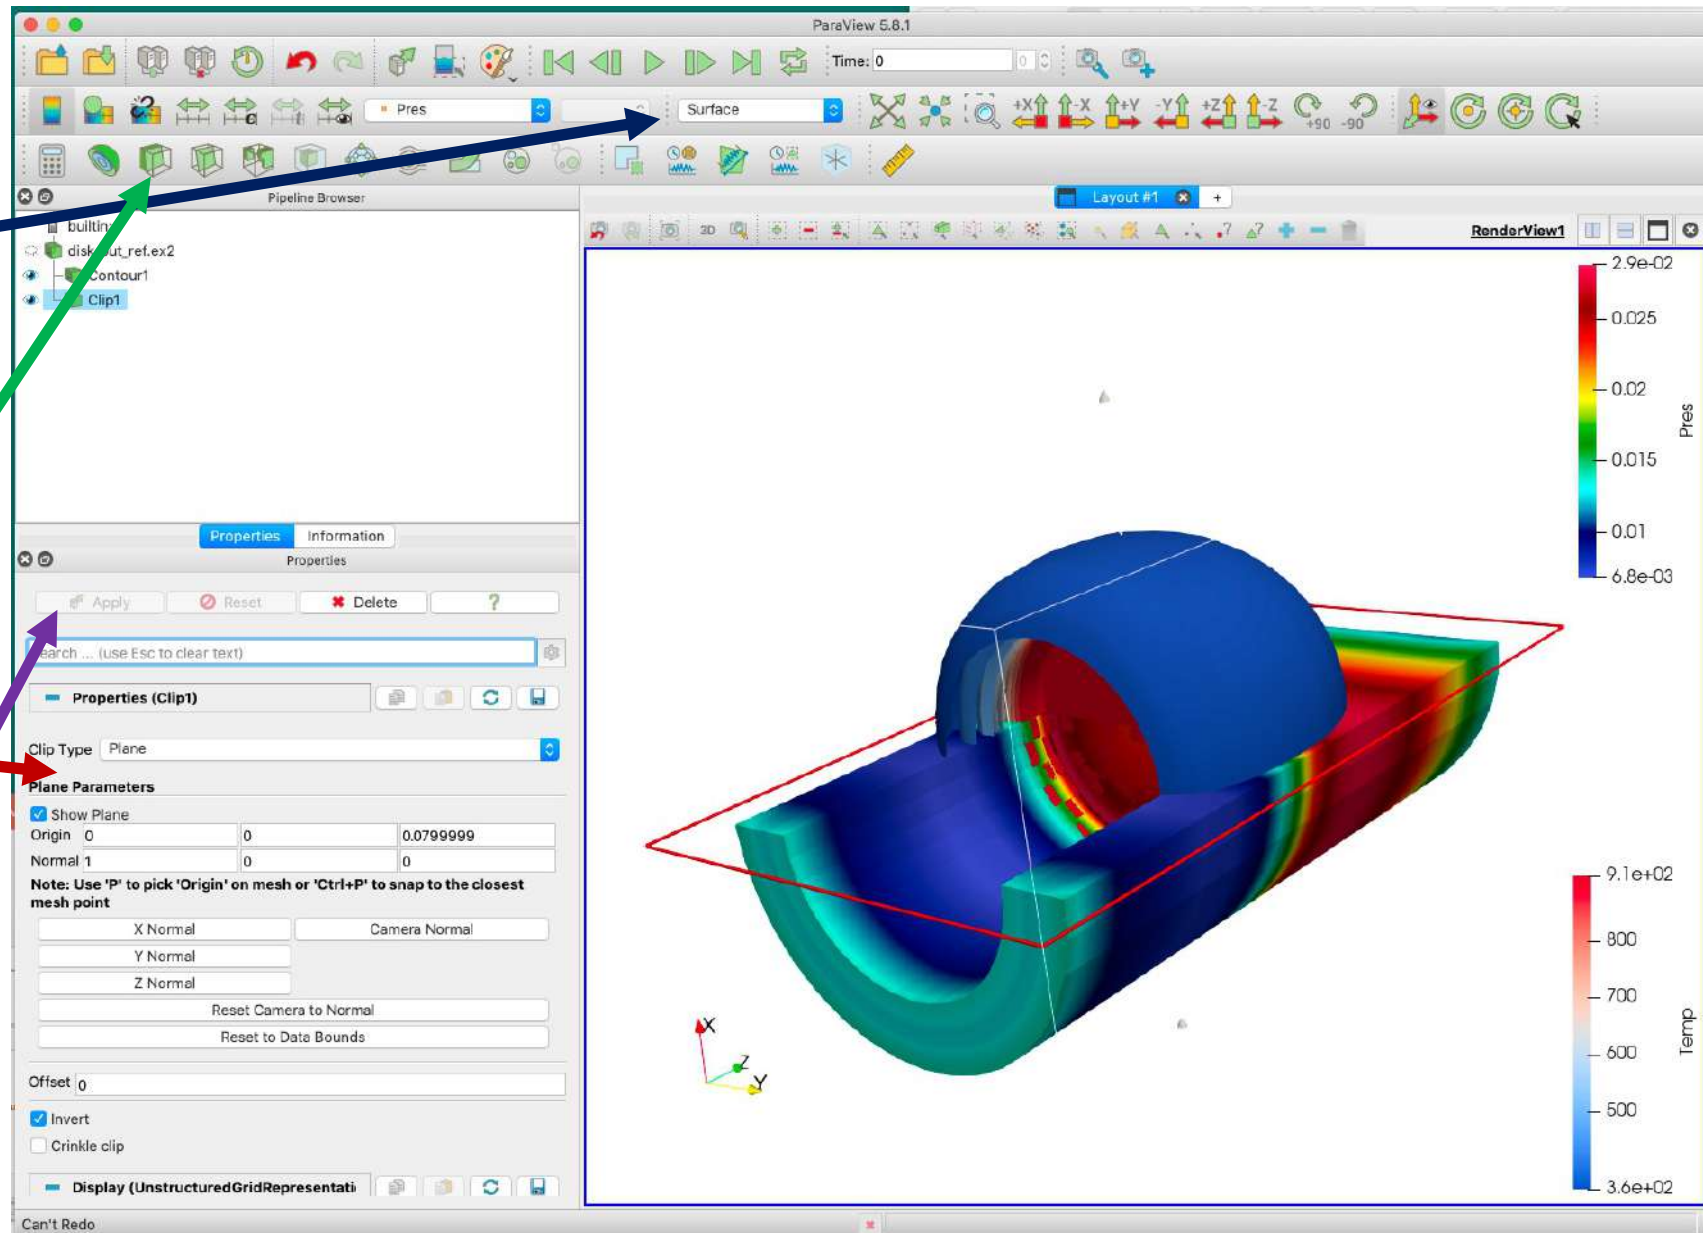


**1. Choose  
disk out ref.ex2**

**2. Select the  
slice filter**

**3. Select the  
plane for clip  
cut (y normal)**

**4 Hit apply**

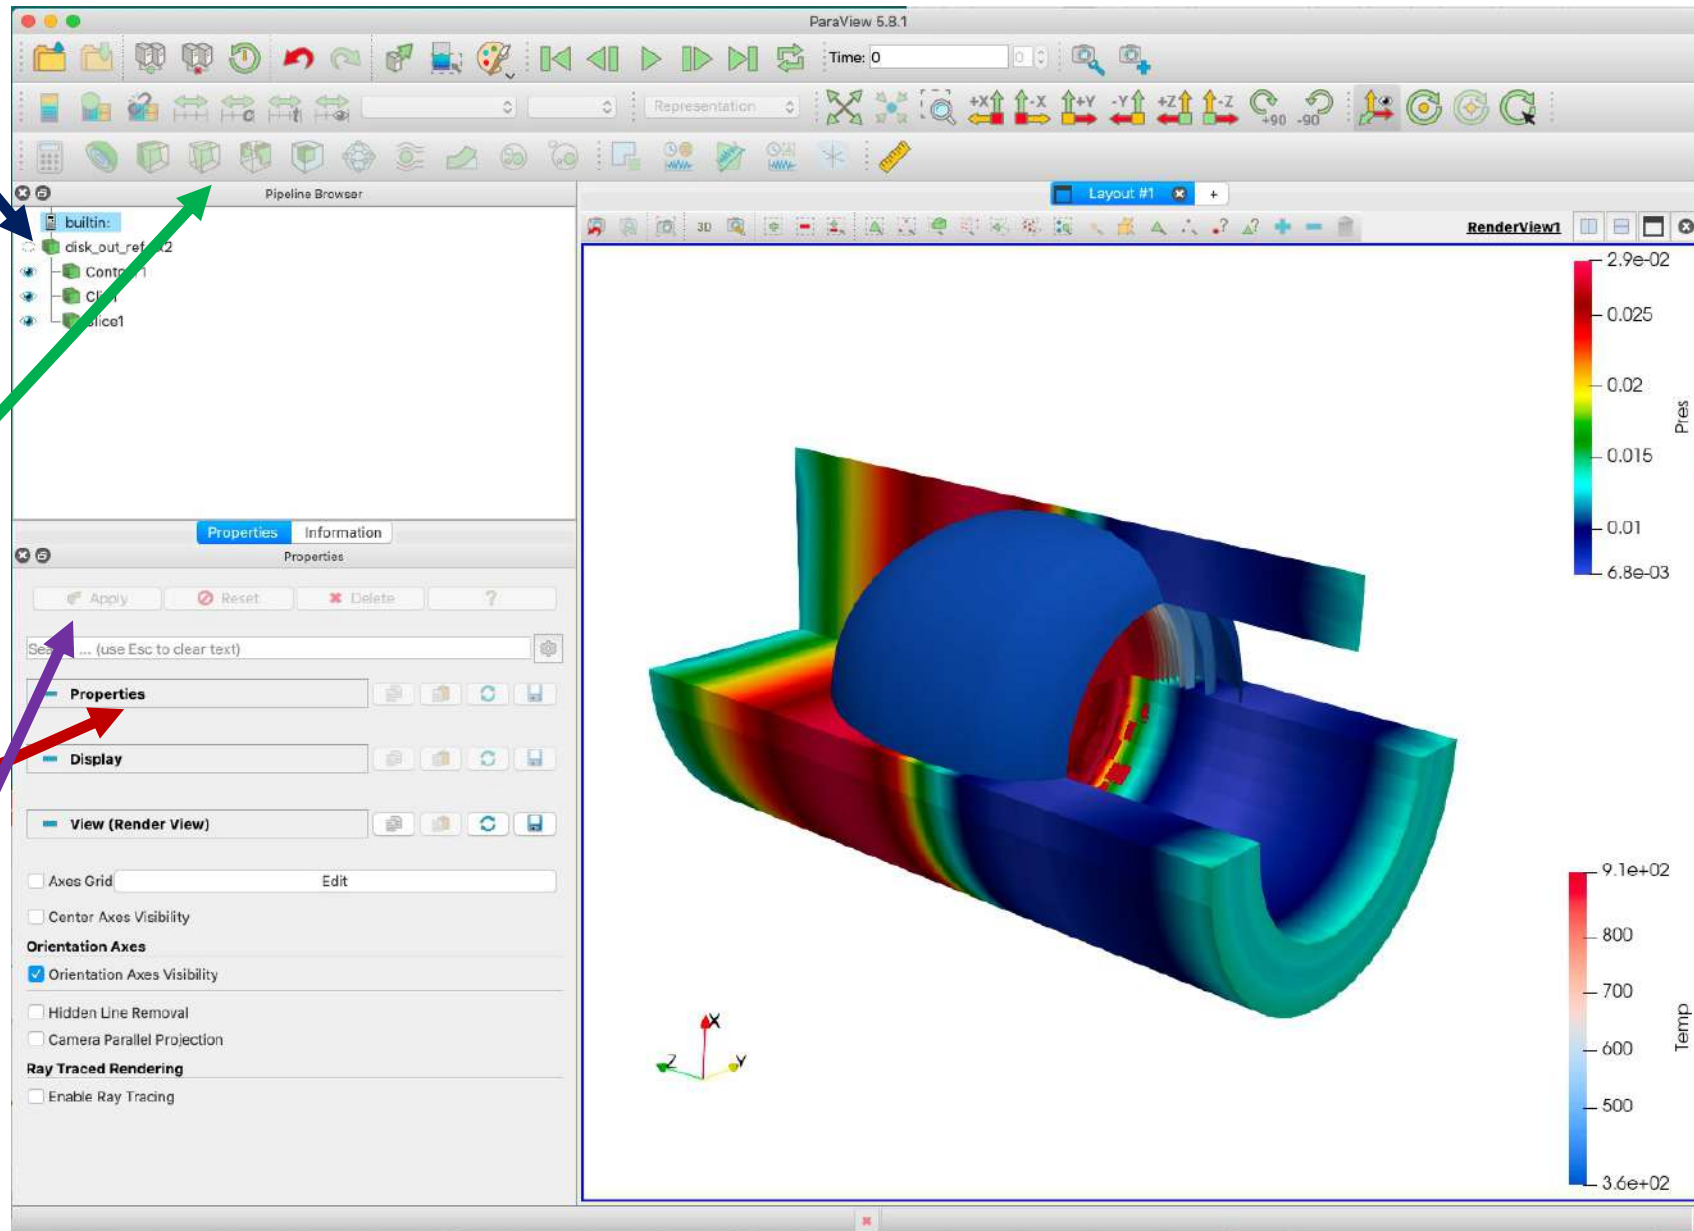

# **Streamline, Tube, and Glyph filter**




**1. Choose  
disk\_out\_ref.ex2**

**2. Select off  
contour and  
clip**

**3. Select the  
streamline filter**

**4 Select Seed  
Type: Point  
source**


**5. Select V for  
coloring**

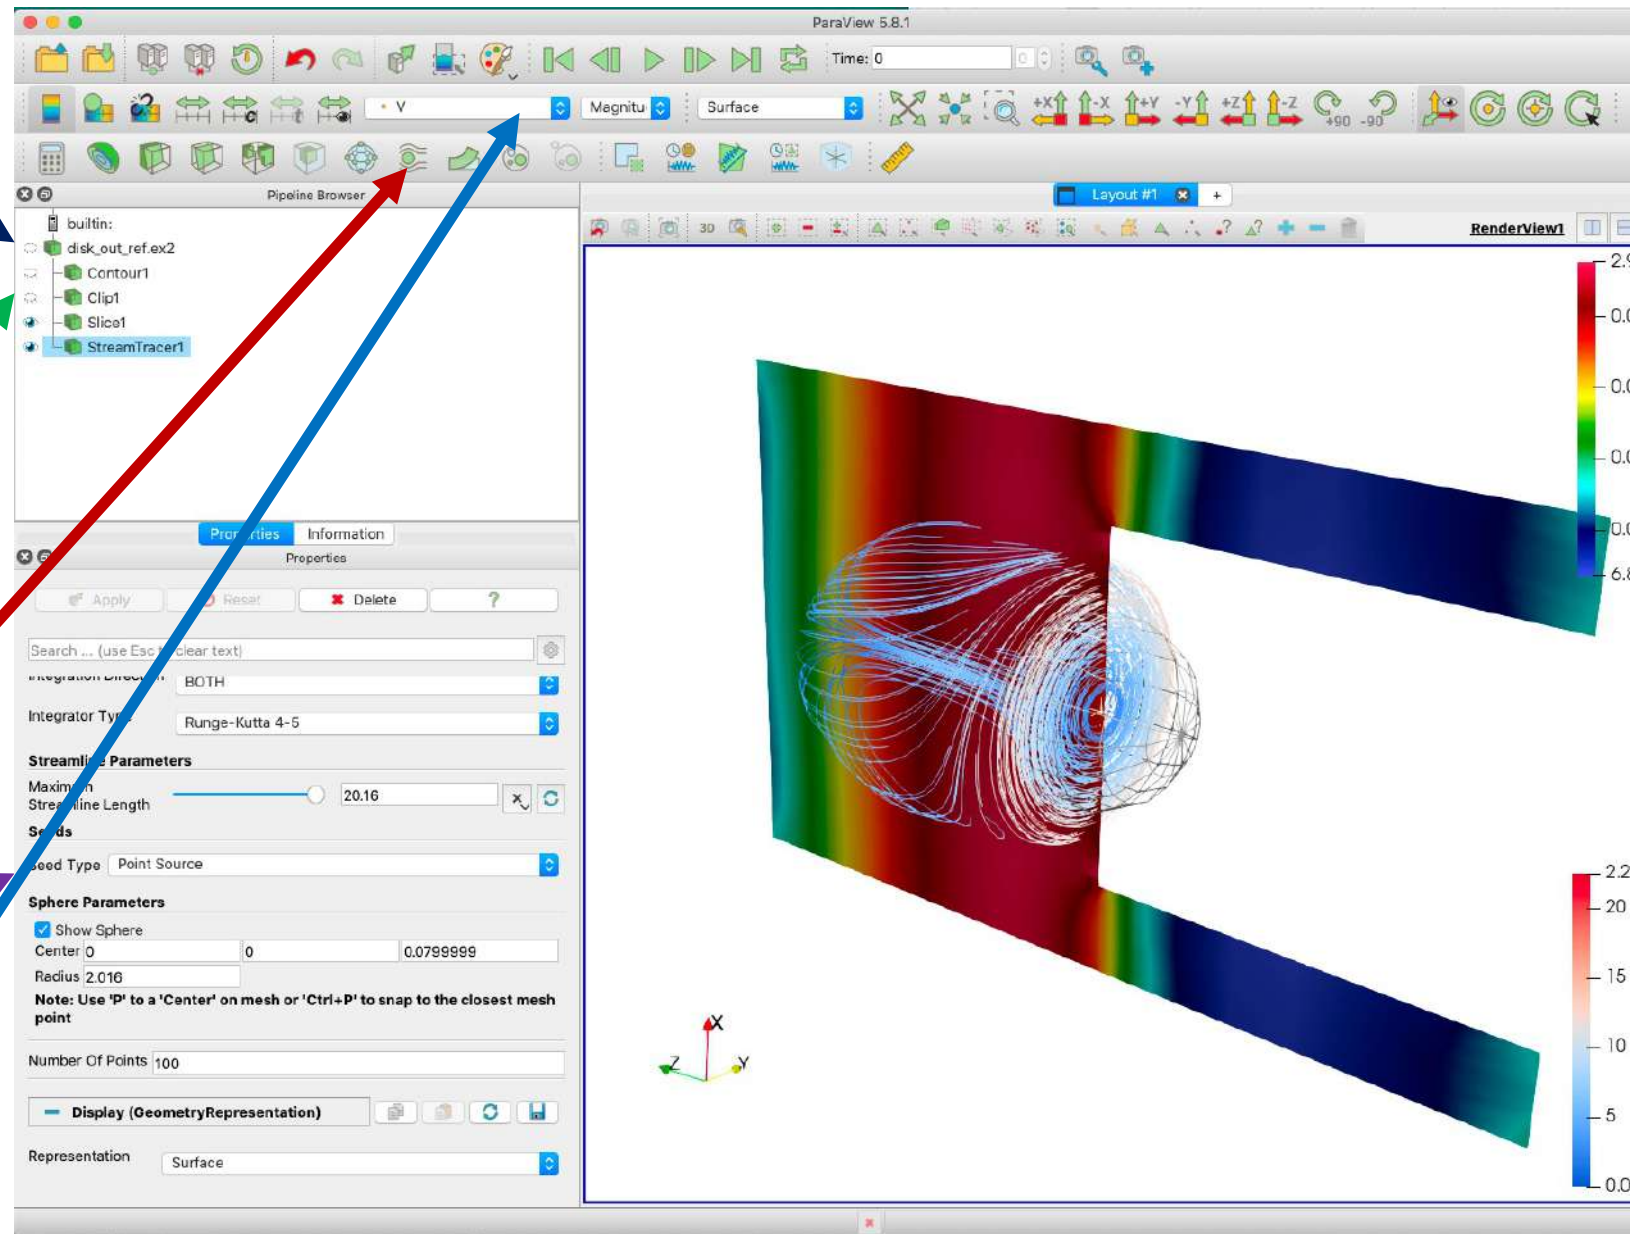

# 1. Choose StreamTracer1

2. Select the tube filter from Filters -> Alphabetically -> Tube


3. Hit apply

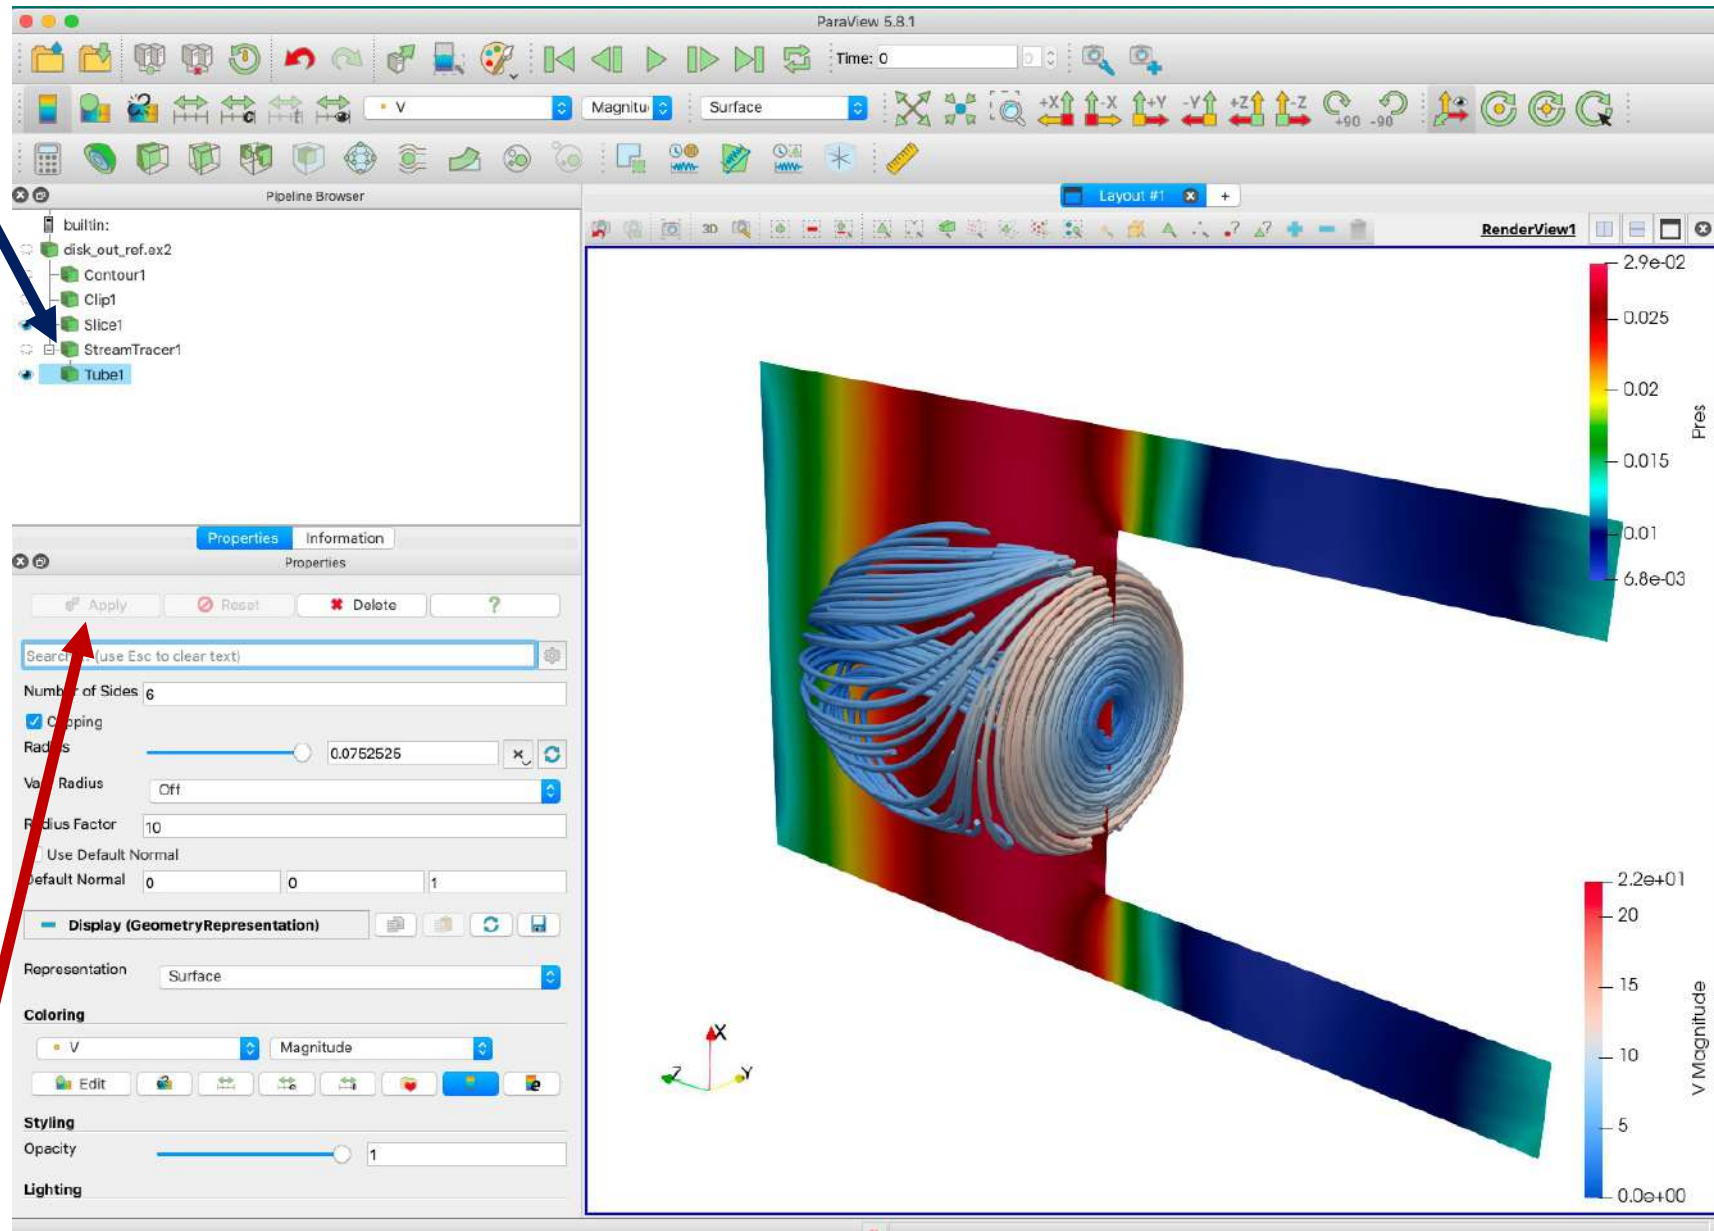

**1. Choose Glyph under Tube1**

**2. Select the Orientation Array and Scale Array both by V**

**3. Hit blue apply**

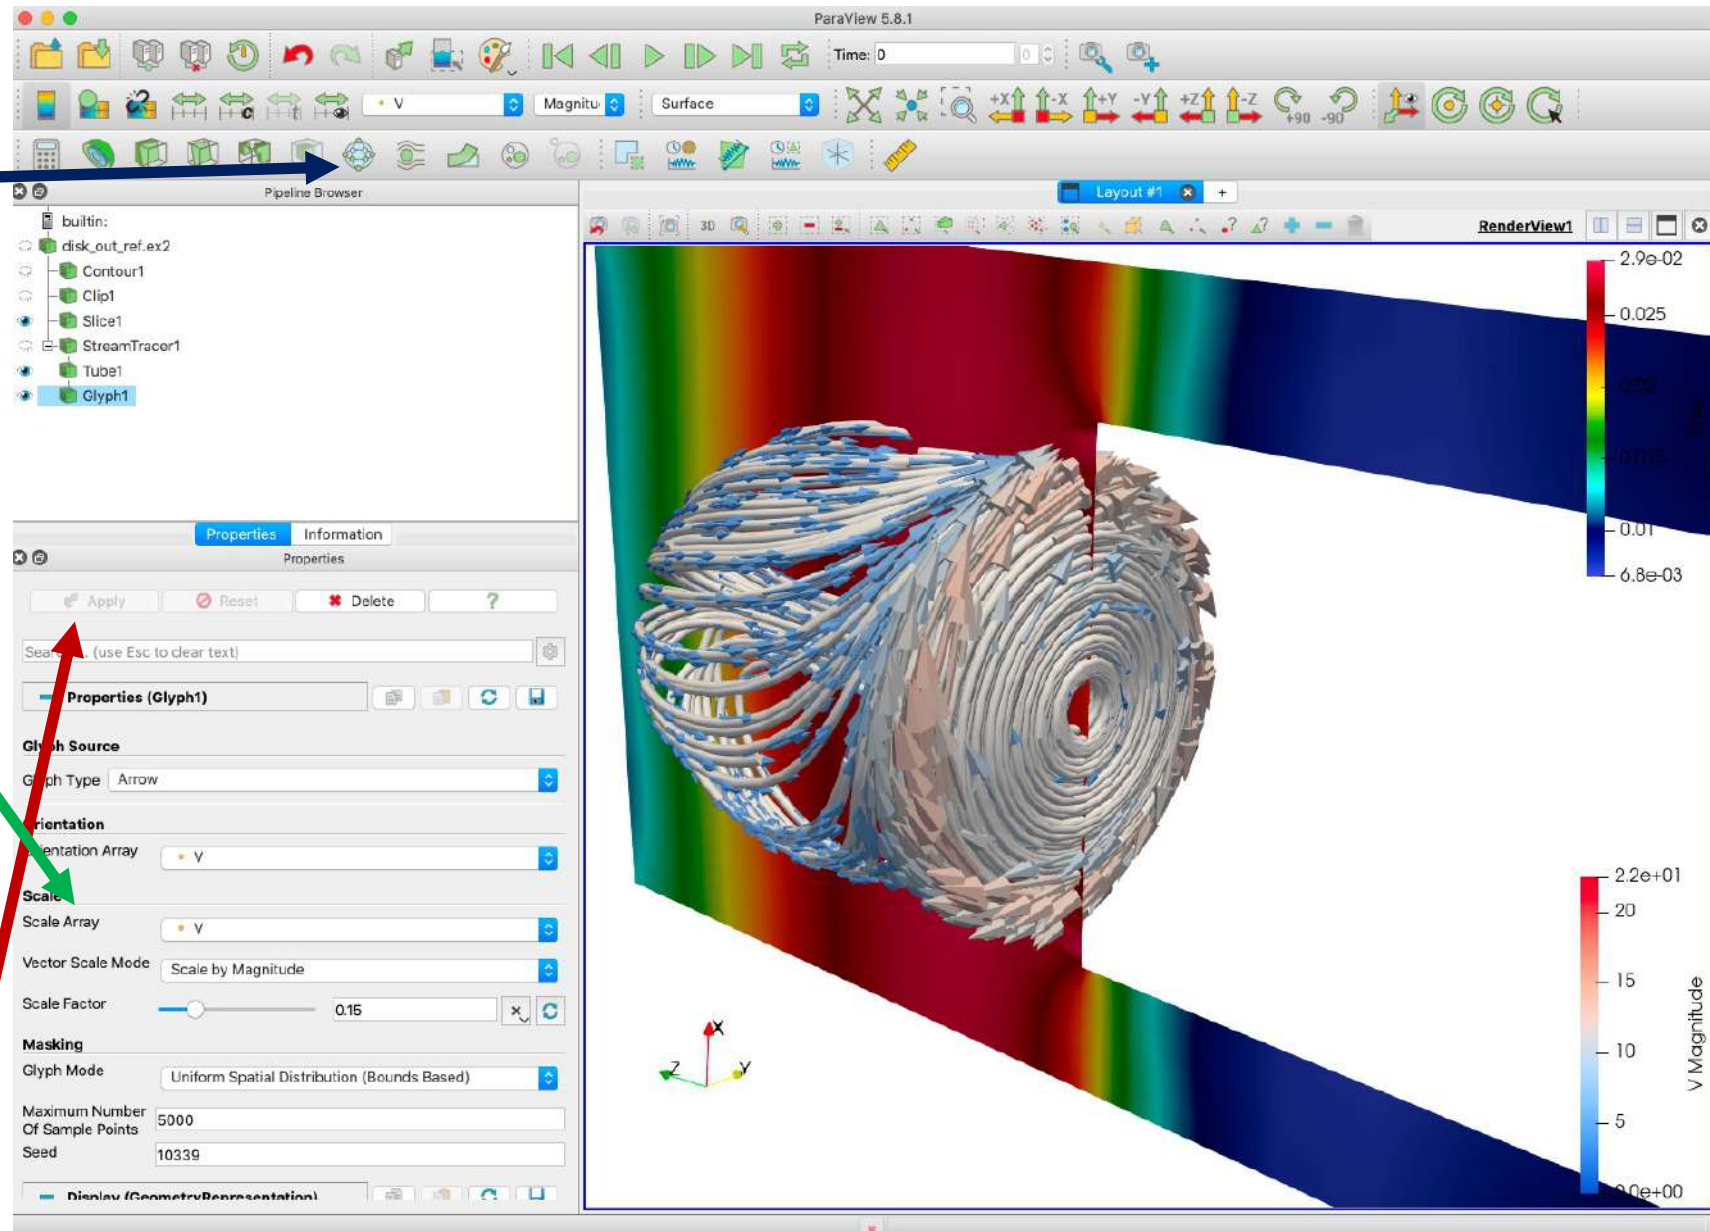




**1. Choose Glyph under Tube1**


**2. Select the Orientation Array and Scale Array both by V**

**3. Hit blue apply**

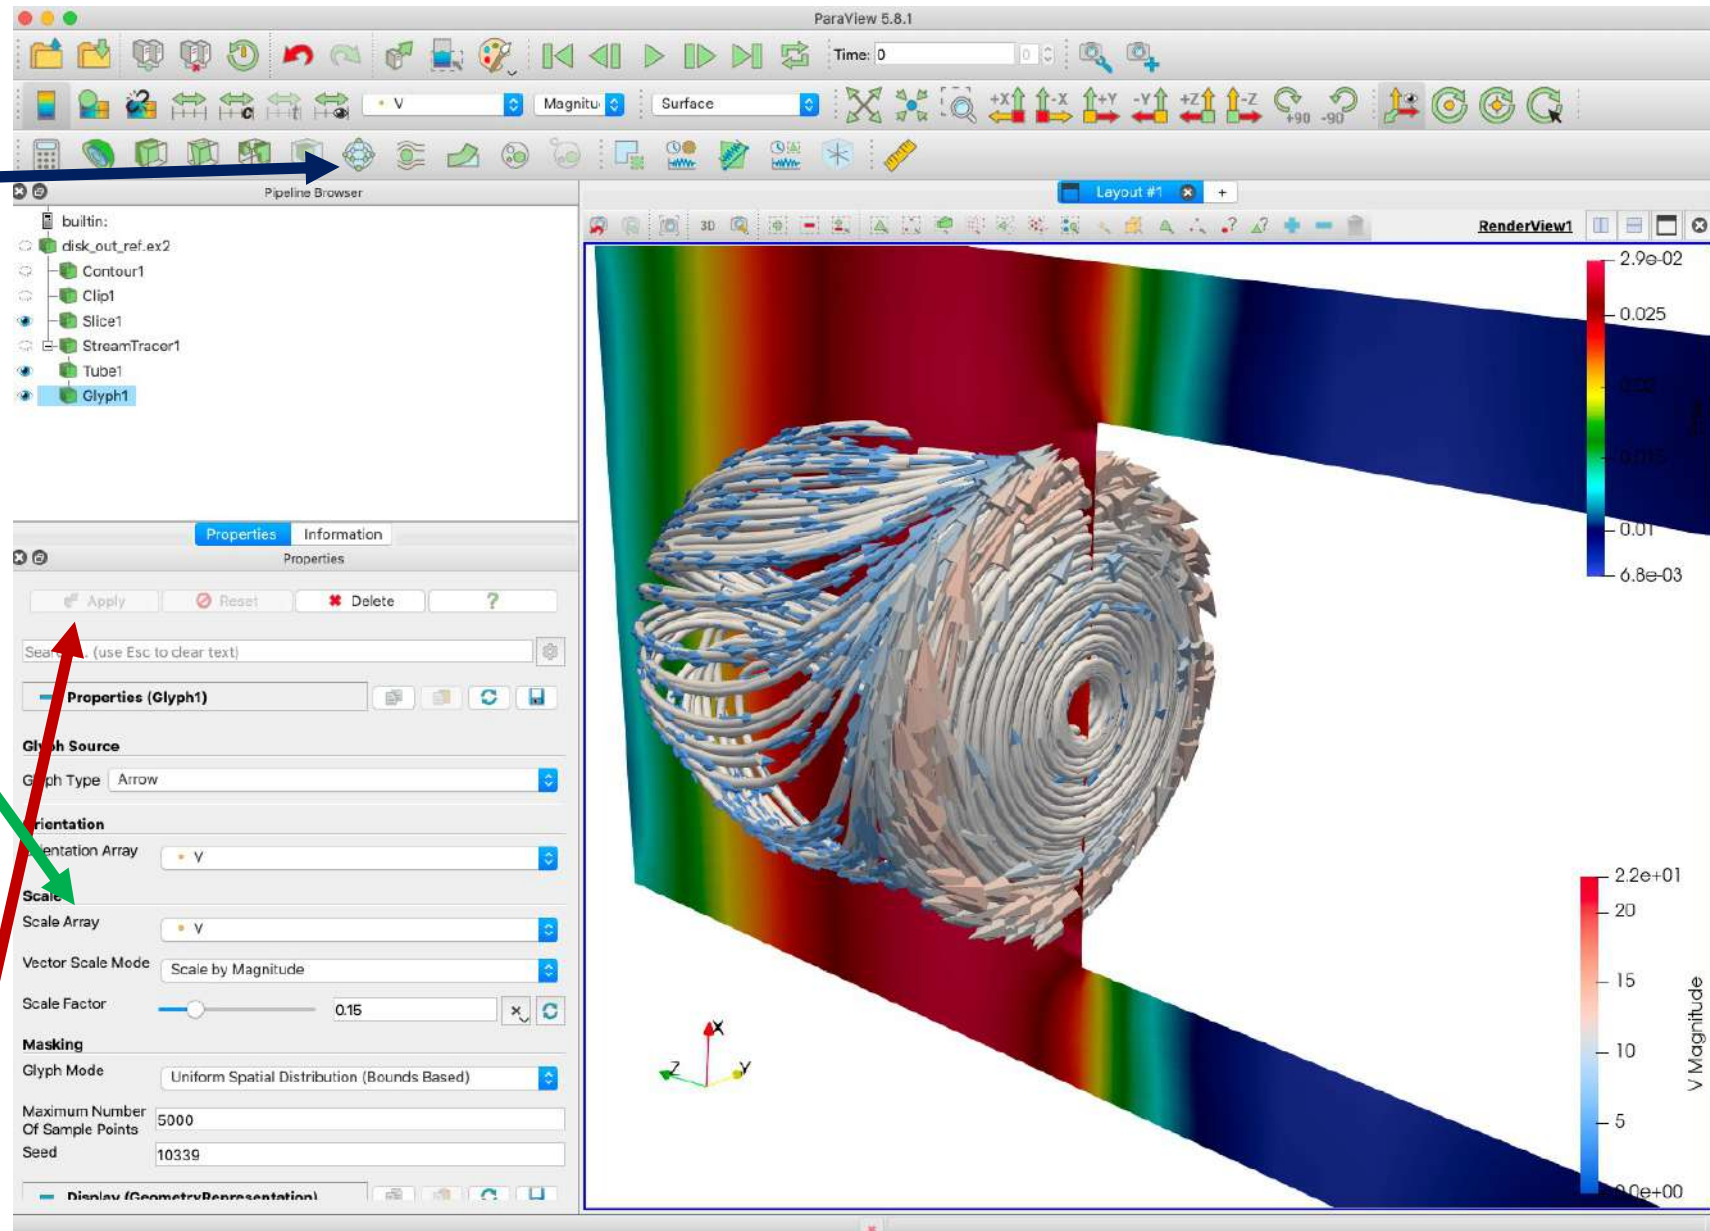


4. Select tube  
and select solid  
color


5. Select color  
map for the  
arrows

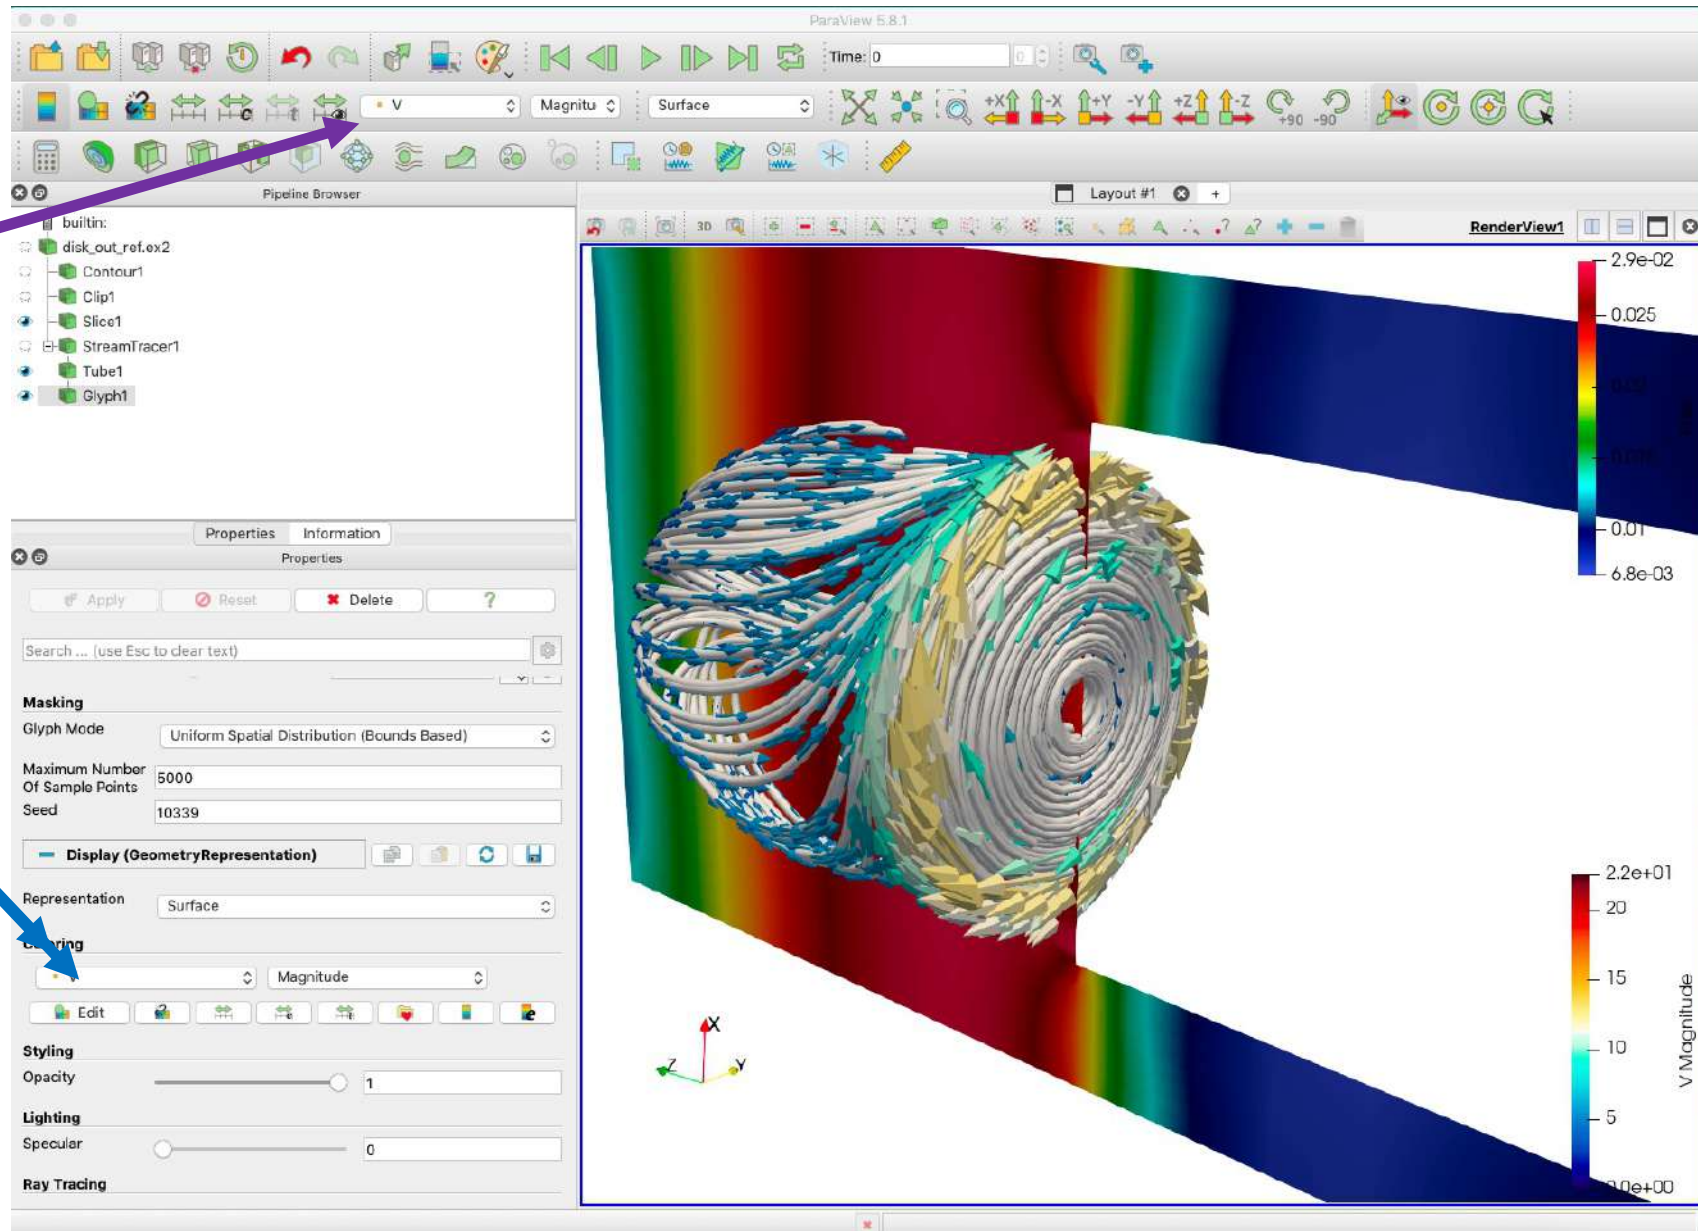

7. Select the background color to black

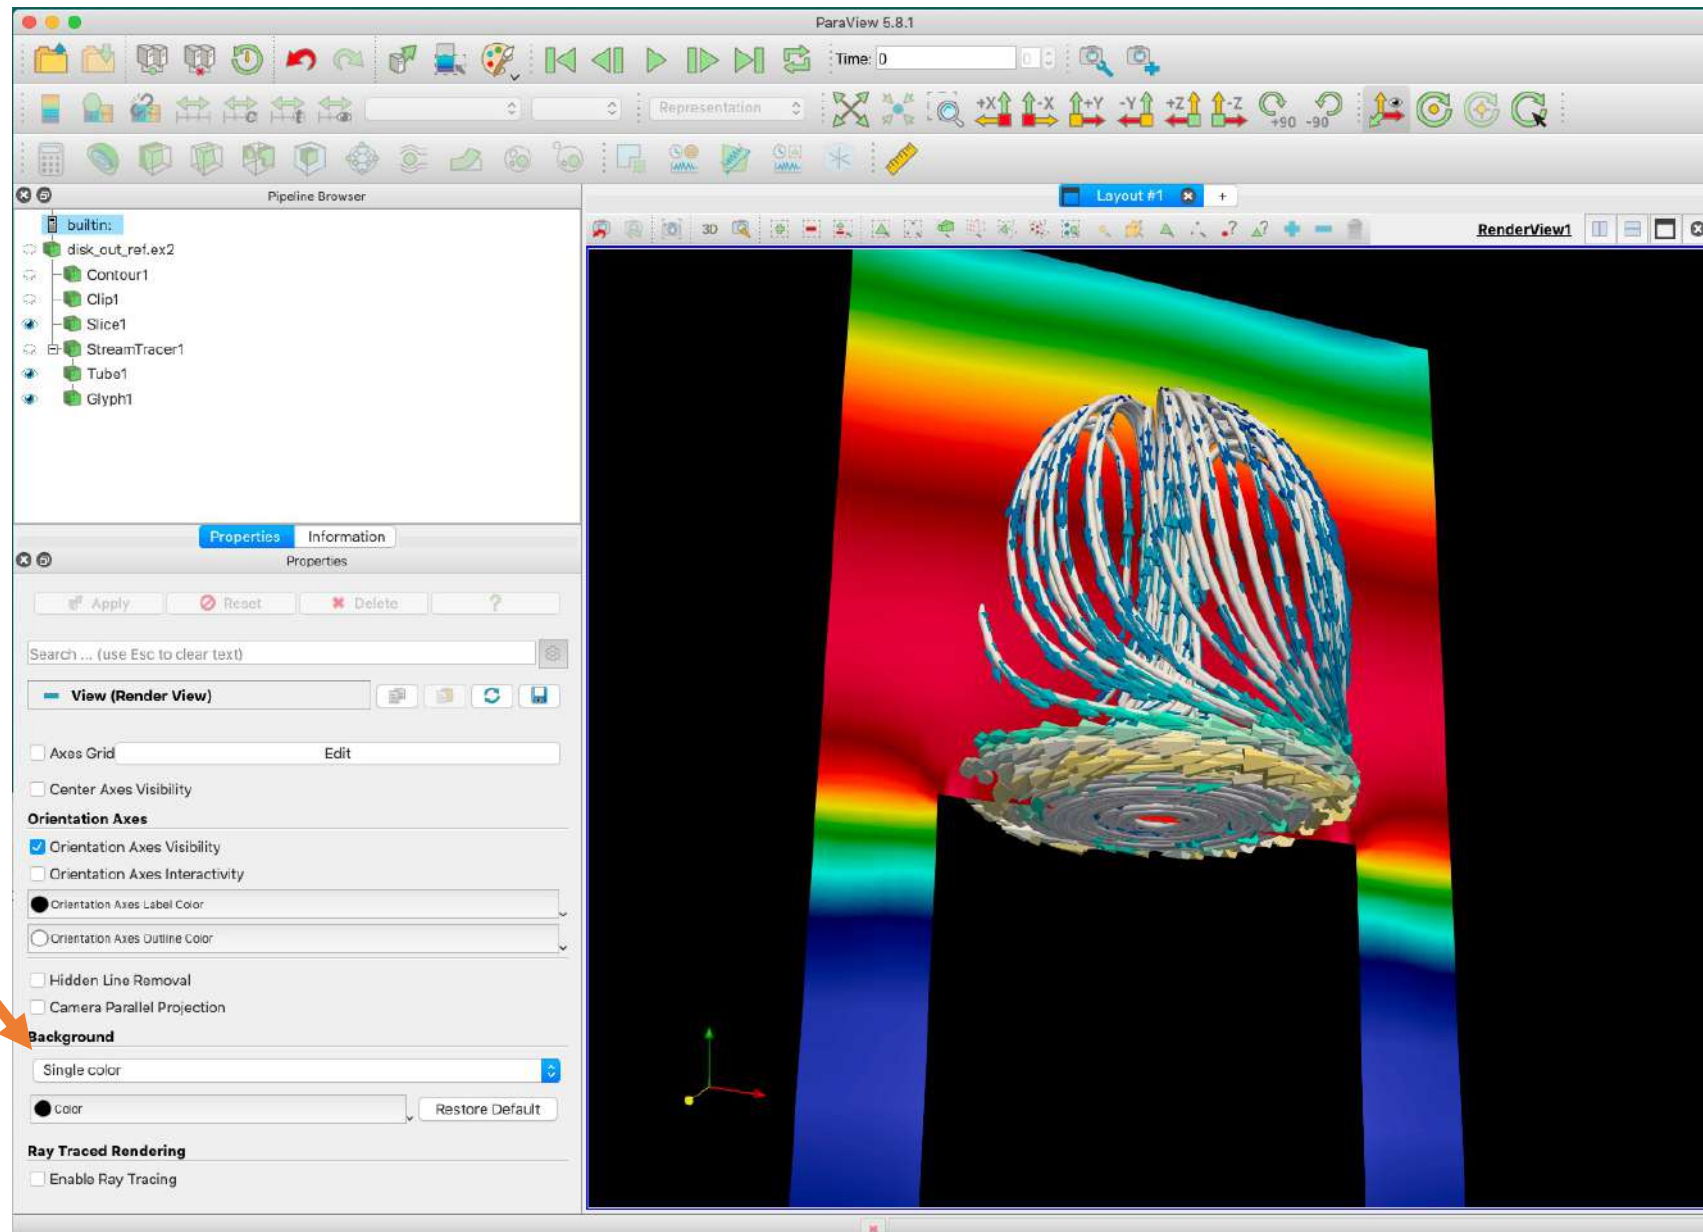



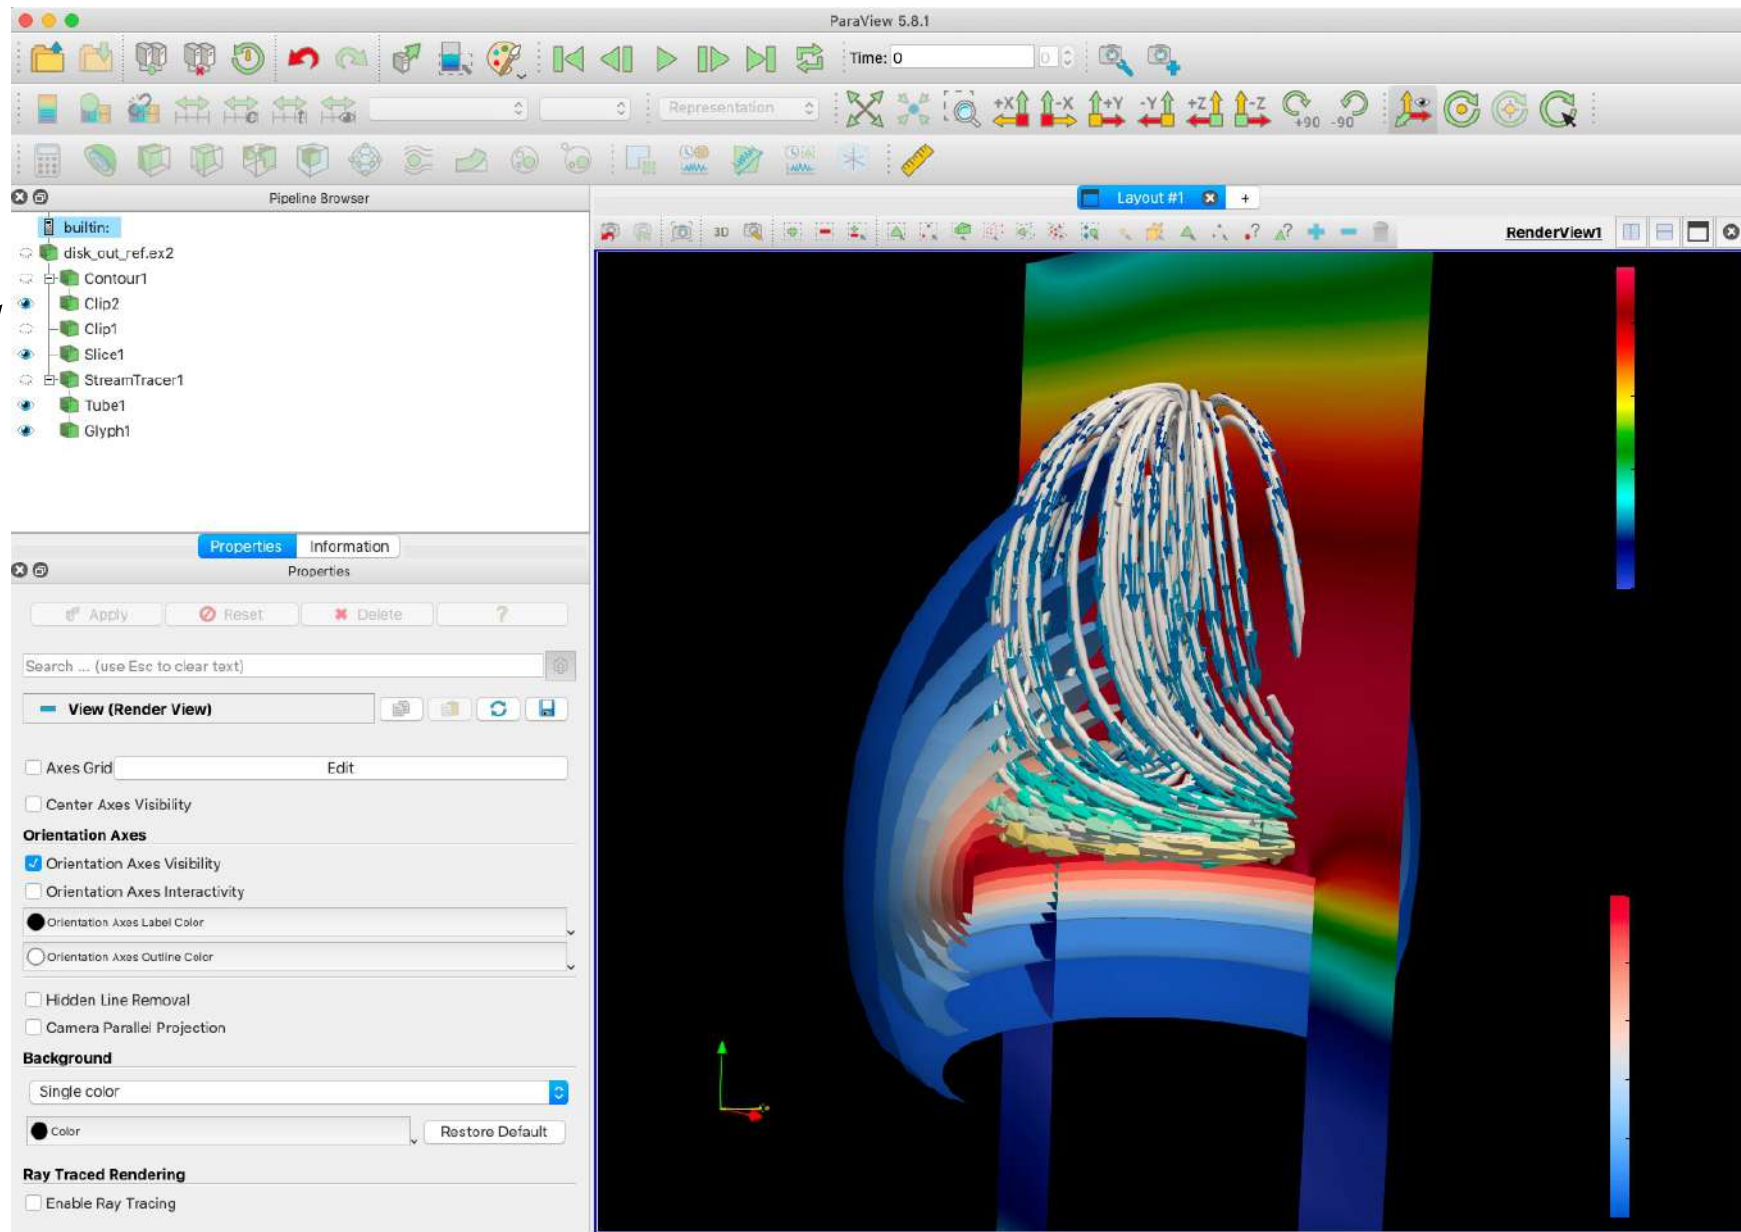

8. Apply clip filter to the countour


Select  
disk\_out\_ref.ex2

Select Volume  
representation

Edit color map

Edit color  
legend font

Select the data  
range

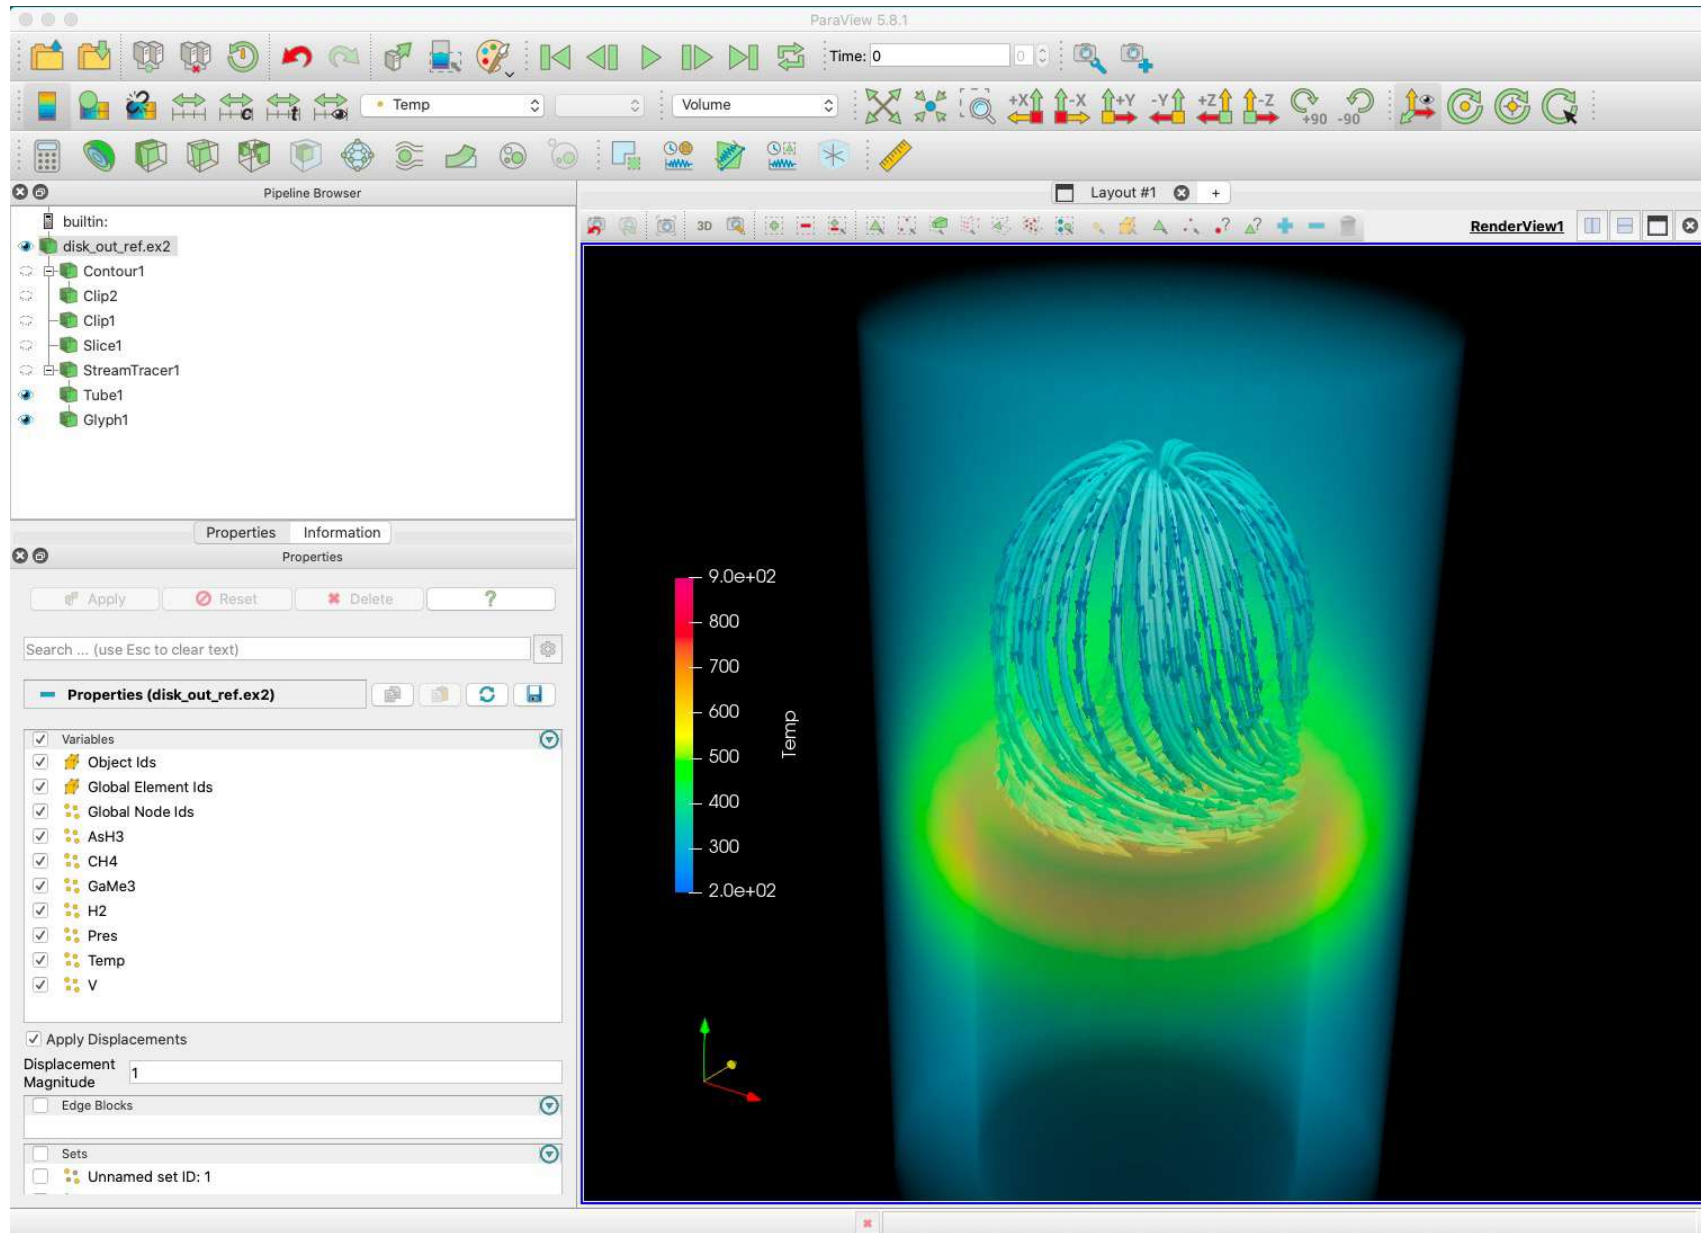

# Summary

- Paraview is a powerful tool for postprocessing and visualizing scientific/engineering data
- You may combine filters to get the best visualization effect
- You can create movies
- You can run it on clusters
- You can do data analysis on it
- More tutorials:
  - <https://docs.paraview.org/en/latest/Tutorials/index.html>
  - [https://www.paraview.org/Wiki/ParaView\\_Classroom\\_Tutorials](https://www.paraview.org/Wiki/ParaView_Classroom_Tutorials)
  - <https://www.paraview.org/Wiki/images/b/bc/ParaViewTutorial56.pdf>